

Reference Guide for Microprocessor Controller

Please read and save these instructions for future reference. Read carefully before attempting to assemble, install, operate or maintain the product described. Protect yourself and others by observing all safety information. Failure to comply with these instructions will result in voiding of the product warranty and may result in personal injury and/or property damage.

DOAS v3.001

DOAS Technical Support
Call 1-866-478-2574



Introduction

Program Features

The microprocessor controller offers control through easy monitoring and adjustment of unit parameters by way of a lighted graphical display and an integral push-button keypad.

Pre-Programmed Operating Sequences

The controller has been pre-programmed to offer multiple control sequences to provide tempered air. Factory default settings allow for easy setup and commissioning. The sequence parameters are fully adjustable. Refer to the Sequence of Operation for details.

BMS Communication

The user can remotely adjust setpoints, view unit status points and alarms. The microprocessor controller is capable of communicating over several protocols:

- BACnet® MSTP
- BACnet® IP
- LonWorks®
- Modbus RTU
- Modbus TCP

Reference Points List for a complete list of BMS points.

Internal Time Clock (Schedule)

The controller has an internal programmable time clock, allowing the user to set occupancy schedules for each day of the week. The controller option also has morning warm-up and cool down capability for improved comfort at the time of occupancy.

Alarm Management

The microprocessor controller will monitor the unit's status for alarm conditions. Upon detecting an alarm, the controller will record the alarm description, time,

date, and input/output status points for user review. A digital output is reserved for remote alarm indication. Alarms are also communicated via BMS (if equipped).

Occupancy Modes

The microprocessor controller offers three modes of determining occupancy: a digital input, the internal time clock or the BMS. If in the unoccupied mode, the unit will either be shut down, continue normal operation utilizing adjustable unoccupied setpoints, recirculate with unoccupied setpoints or will cycle on to maintain adjustable unoccupied room temperature and humidity setpoints (room temperature and humidity sensor is optional).

Remote Display Panel (if equipped)

A touch pad display panel allows for remote monitoring and adjustment of parameters, allowing ease of control access without going outdoors.

WARNING

Electrical shock hazard. Can cause personal injury or equipment damage. Service must be performed only by personnel that are knowledgeable in the operation of the equipment being controlled.

WARNING

Mechanical high static protection cutoffs must be installed by others to protect the system and equipment from over-pressurization when using factory provided control sensors. The manufacturer does not assume responsibility for this.

Table of Contents

Sequence of Operation

General Operation	3-4
Setpoint Control (Occupied)	4
Setpoint Control (Unoccupied)	4
Heating	4
Cooling	4
Economizer	5
Dehumidification	5
Reheat	5
Supply Fan VFD Sequence	5
Exhaust Fan VFD Sequence	5
OA and Recirc Air Damper Control	6
Energy Recovery Wheel	6
Alarms	7

Controller Overviews

Large Controller	8
Medium Controller	9
c.pCOe - Expansion Board Overview, Medium	10
pCOe - 4:1 Furnace	11
pCOe - High Turndown Furnace	11

Display Use 12

Example of Parameter Adjustment 12

Example of Web User Interface 13

Main Menu 14

Unit Status Overview 15-17

Unit Enable 18

Menus

Control Variables

Temp Control	18-20
Dehumidification	20-21
Refrigeration	22
Damper Control	22-23
Energy Recovery	24

Fan Control

Supply Fans Control	25
Exhaust Fans Control	26

Occupancy 27

Advanced

Manual Overrides	28-30
Network Settings	30-31
Backup/Restore	32-33
I/O Configuration	34
Unit Configuration	34

Alarms 35

IG Furnace Alarm Descriptions 35

Appendix

Remote Display	36
Carel® NTC Temp Sensor Chart	36
I/O Expansion Board Quick Start	37
Room Thermostat Quick Start	38-39
GreenTrol® Airflow Monitoring Quick Start	40
Points List	41-52
Modbus Connections	53

Maintenance Log 53-54

Our Commitment Backcover



The microprocessor controller can be configured for air handler, energy recovery, and dedicated outdoor air systems. Each application utilizes similar technologies for heating and cooling: chilled water, hot water, indirect gas, electric heat, packaged DX cooling, and packaged DX cooling with digital and inverter scrolls. All setpoints, lockouts and delays are user adjustable via the integral keypad display, remote display, or web user interface.

General Operation

UNIT START COMMAND: The microprocessor controller requires a digital input to enable operation. The unit can then be commanded on or off by this digital input, keypad, the BMS or internal time clock. When a start command becomes active the following steps occur:

- Energy recovery wheel starts, if equipped
- Factory mounted and wired dampers are powered (Outdoor air, exhaust air, and recirculation air dampers, if equipped)
- Exhaust fan, if equipped, starts after adjustable delay
- Supply fan starts after adjustable delay
- Tempering operation starts after adjustable delay

UNIT STOP COMMAND: A shutdown occurs when there is not an occupied or unoccupied start command. The following shutdown methods can occur.

Hard shutdown occurs under the following conditions:

- A user or the BMS disables the system, and the supply temperature is less than the soft shutdown enable setpoint.
- Occupancy is commanded to unoccupied while there is no unoccupied start command, and the supply temperature is less than the soft shutdown enable setpoint.

When a hard shutdown occurs:

- The unit shuts down immediately.
- Dampers spring-return to their off position.

Soft shutdown occurs under the following conditions:

- A user or the BMS disables the system, and the supply temperature is greater than or equal to the soft shutdown enable setpoint.
- There is no unoccupied or occupied start command and the supply temperature is greater than or equal to the soft shutdown enable setpoint.

The following occurs during a soft shutdown:

- Tempering outputs immediately revert back to their off value; while
- Dampers remain open and fans continue to run; until
 - The supply air temperature falls below the soft shutdown enable setpoint minus 5.0°F; or
 - The soft shutdown delay timer has expired.

UNIT/SYSTEM DISABLED COMMAND:

The unit becomes disabled due to the following:

- The unit was disabled from the controller's Unit Enable screen.
- The unit was disabled from the BMS.
- The shutdown input is in the shutdown position.
- A shutdown alarm was activated.

When disabled the following actions occur:

- The unit shuts down immediately; and
- Dampers spring-return to their off position.

OCCUPIED/UNOCCUPIED MODES: The microprocessor controller offers three modes of determining occupancy: digital input, the internal time clock or the BMS. When in the unoccupied mode, the unit can be configured to shut down, or cycle on to maintain the unoccupied room setpoints. The unit can be temporarily overridden to the occupied mode via a digital input, keypad display, or room thermostat, if equipped.

The controller can be configured with morning warm-up and cool down to bring the space to the occupied setpoint prior to occupancy.

• Occupied Mode:

- Exhaust fan on, if equipped
- Supply fan on
- Heating (refer to Heating section)
- Cooling (refer to Cooling section)
- Energy Recovery Wheel Control (refer to Energy Recovery Wheel section), if equipped
- Damper Control (refer to Outdoor Air and Recirculated Air section), if equipped

• Unoccupied Mode (Unit Off):

Unit remains off when in unoccupied mode.

• Normal Operation with Unoccupied Setpoints:

Optional unoccupied mode will operate as if in occupied mode but will utilize adjustable unoccupied setpoints.

- Exhaust fan on, if equipped
- Supply fan on
- Heating (refer to Heating section)
- Cooling (refer to Cooling section)
- Energy Recovery Wheel Control (refer to Energy Recovery Wheel section), if equipped
- Damper Control (refer to Outdoor Air and Recirculated Air section), if equipped

• Recirculation with Unoccupied Setpoints:

Optional unoccupied mode when there is an unoccupied recirculation damper. The unit will continue to run, but in full recirculation.

- Supply fan on
- Recirculation air damper open
- OA damper closed
- Tempering operations begin

Sequence of Operation

- **Unoccupied Mode (Cycle on Room):** Optional unoccupied mode when there is an unoccupied recirculation damper and room temperature and/or humidity sensor(s) connected to the controller. The unit will cycle on to maintain unoccupied room setpoints if there is a call for unoccupied heating, cooling or dehumidification.
 - Exhaust fan off, if equipped
 - Supply fan on
 - Recirculation air damper open
 - OA damper closed
 - Tempering operations begin

Setpoint Control (Occupied)

Supply air temperature setpoint can be configured as constant, or can be reset by either outside air temperature, or room temperature setpoint. If equipped with BMS communications, the user can also directly command the supply temperature setpoint, or room temperature setpoint, if equipped.

- **Outdoor Air Temperature Reset Function:** The controller will default to supply temperature reset based on outdoor air temperature. The controller will monitor the OA temperature and reset the supply temperature setpoint based upon the outdoor air reset function.
- **Room Temperature Reset (optional):** With a room temperature sensor, the controller will adjust the supply air temperature setpoint between the minimum (55°F) and maximum (90°F), to satisfy the desired room temperature. Room temperature setpoint can be adjusted locally at the microprocessor by BMS or room thermostat, if equipped.

Setpoint Control (Unoccupied)

When equipped with an unoccupied recirculation damper and optional room temperature and/or humidity sensors, the unit will cycle on to maintain the unoccupied room setpoints.

- **Unoccupied Heating:** If equipped with heating, the unit is enabled when the room temperature is less than the unoccupied heating setpoint minus differential (60°F). The supply air temperature setpoint will be set to the supply maximum reset limit (90°F). The unit cycles off when the room temperature reaches the unoccupied heating setpoint.
- **Unoccupied Cooling:** If equipped with cooling, the unit is enabled when the room temperature is greater than the unoccupied cooling setpoint plus differential (80°F+5°F). The supply air temperature setpoint will be set to the supply minimum reset limit (55°F). The unit cycles off when the room temperature reaches the unoccupied cooling setpoint.

- **Unoccupied Dehumidification:** If equipped with cooling, the unit is enabled when the room relative humidity exceeds the unoccupied room relative humidity setpoint plus differential (50%+5%). The supply air temperature setpoint will be set to the equivalent occupied supply setpoint.
- **Morning Warm-Up/Cool Down:** The unit uses adjustable preset time to temper the space to occupied setpoint prior to occupancy (room temperature sensor is optional).

Heating

The heating is controlled to maintain the supply temperature setpoint. The heating will be locked out when the outside air temperature is above the heating lockout (80°F adj).

- **Indirect Gas Furnace:** Microprocessor controller will modulate the indirect gas furnace to maintain the supply temperature setpoint.
- **Hot Water Coil:** Microprocessor controller will modulate a hot water valve (provided by others) to maintain the supply temperature setpoint. **Coil freeze protection must be provided by others in the field!**
- **Electric Heater:** Microprocessor controller will modulate an electric heater to maintain the supply temperature setpoint.

Cooling

The cooling is controlled to maintain the supply temperature setpoint. The mechanical cooling will be locked out when the outside air temperature is below the cooling lockout (55°F).

- **Chilled Water:** Microprocessor controller will modulate a chilled water valve (provided by others) to maintain supply air setpoint. **Coil freeze protection must be provided by others in the field!**
- **Packaged/Split DX Cooling (Standard Scroll):** Microprocessor controller will enable stages of cooling to maintain the supply air setpoint.
- **Packaged DX Cooling (Digital Scroll):** Microprocessor controller will modulate the digital scroll to maintain the supply air temperature setpoint.
- **Packaged DX Cooling (Inverter Scroll):** Microprocessor controller will modulate the inverter scroll to maintain the supply air temperature setpoint.

Economizer

If the application requires cooling, and the outdoor air conditions are suitable for free cooling, the controller may enter the economizer state. If the unit is economizing and the discharge temperature setpoint is not being met, the controller may bring on mechanical cooling. If equipped with a modulating outdoor air and recirculated air damper, the dampers will modulate between the minimum OA and maximum positions to maintain the supply temperature setpoint. If equipped with an energy wheel, Reference Energy Recovery Wheel Sequence.

- **Temperature:** The economizer will be locked out when:
 - The outside air is greater than the economizer high lockout (65°F).
 - The unit is operating in dehumidification mode.
 - There is a call for heating.
- **Temperature/Enthalpy:** The economizer will be locked out when:
 - The outside air is greater than the economizer high lockout (65°F dry-bulb).
 - The outside air is greater than the economizer high enthalpy lockout (23 btu/lb).
 - The unit is operating in dehumidification mode.
 - There is a call for heating.

Dehumidification

The cooling is controlled to maintain the cold coil setpoint. The dehumidification sequence will be locked out when the OA is less than the dehumidification lockout (10°F) above the cold coil setpoint. If equipped with BMS communications, the user can also directly set the cold coil leaving air setpoint.

- **Optional Room Relative Humidity Sensor or Thermostat:** The controller will adjust the cold coil leaving air temperature setpoint between the minimum (50°F) and maximum (55°F) setpoint to satisfy the desired room relative humidity setpoint.

Reheat

While the unit is in dehumidification mode, the supply air can be reheated via Primary Heating Source, On/Off Hot Gas Reheat or Modulating Hot Gas Reheat.

- **Modulating Hot Gas Reheat (valve):** The microprocessor controller will modulate the hot gas reheat valve to maintain the supply temperature setpoint.
- **Reheat Plus:** The primary heat source configured to act as secondary reheat.

Supply Fan VFD Sequence

The factory installed VFD is wired to the controller. Supply fan speed needs to be set during test and balance of the unit. If equipped with BMS communications, the user can also directly command the supply fan speed.

- **Optional Space/Duct CO₂ Sensor:** The controller will modulate the supply fan based upon a comparison of the CO₂ setpoint to the actual CO₂ levels reported from the sensor.
- **Optional Duct Static Pressure Sensor:** The controller will modulate the supply fan based upon a comparison of the duct static pressure setpoint to the actual duct static pressure level reported from the sensor.
- **Optional Building Static Pressure Sensor:** The controller will modulate the supply fan based upon a comparison of the building static pressure setpoint to the actual building static pressure level reported from the sensor.
- **Optional Single Zone VAV (SZ):** The controller will control the supply air temperature and supply fan speed to maintain the room temperature setpoint. This sequence requires a room temperature sensor.
 - Heating** - When the room requires heating, the controller will reset the supply air temperature setpoint up to the maximum (90°F) while increasing the supply fan speed up to its maximum heating speed.
 - Cooling** - When the room requires cooling, the controller will first reset the supply air temperature setpoint down to the minimum (55°F) while the supply fan remains at the minimum cooling speed. After a time delay, the supply fan speed will increase up to its maximum cooling speed to maintain the room temperature setpoint.

Exhaust Fan VFD Sequence

The factory installed VFD is wired to the controller. Exhaust fan speed needs to be set during test and balance of the unit. If equipped with BMS communications, the user can also directly command the exhaust fan speed.

- **Optional Building Static Pressure Sensor:** The controller will modulate the exhaust fan based upon a comparison of the building static pressure setpoint to the actual building static pressure level reported from the sensor.
- **Optional Supply Fan Tracking:** The controller will proportionally modulate the exhaust fan based upon the supply fan speed.
- **Optional Outdoor Air Damper Tracking:** The controller will proportionally modulate the exhaust fan based upon the outdoor air damper position.

Outdoor Air and Recirculated (Recirc) Air Damper Control

If equipped with a modulating outdoor air and recirculated air damper, the recirculated air damper will operate inverse of the outdoor air damper. The outdoor air damper will open to a Minimum Outdoor Air Position (Min OA) when in occupied mode. If the controller is configured to modulate the supply fan speed, the minimum and maximum OA positions can be reset based on supply fan speed. If equipped with BMS communications, the user can also directly reset the damper position up to the maximum OA position.

- **Optional Space CO₂ Sensor:** The controller will proportionally modulate the OA/RA dampers based upon a comparison of the CO₂ setpoint to the actual CO₂ level reported from the sensor. As the CO₂ level rises, the controller will proportionally modulate the outdoor air damper open, between the minimum OA damper position and maximum CO₂ position.
- **Optional Building Pressure:** The OA/RA dampers will modulate based upon the signal from a building static pressure sensor. The controller will modulate the dampers, between the minimum and maximum OA positions, based upon a comparison of the building static pressure setpoint to the actual building static pressure level reported from the sensor.

Energy Recovery Wheel Sequences

Economizer (optional): If the unit is equipped with an energy recovery wheel, the economizer will modulate/stop the energy wheel to achieve free cooling. Jog wheel control is available during stop wheel economizer operation. This sequence allows the wheel to rotate for a short period of time exposing a new section to the air stream.

- **Stop Wheel:** When economizer mode is enabled and there is a signal for cooling, the wheel will stop rotating to allow free cooling.
- **Modulate Wheel:** When economizer mode is enabled and there is a signal for cooling, the controller modulates wheel speed to maintain the supply temperature setpoint.
- **Energy Wheel Bypass Dampers, if equipped:** During normal operation, the dampers shall remain closed to allow full operation of the energy wheel. During economizer sequences, the dampers will be open to bypass the energy wheel.

Frost Control (optional): The microprocessor controller will activate the frost control method when the outdoor air temperature is less than the defrost setpoint (5°F) and the wheel pressure switch is closed due to a high wheel pressure drop. Once the pressure drop decreases below the pressure switch point or the outdoor air temperature increases, the unit will resume normal operation.


- **Electric Preheater:** When frosting is occurring, the preheater is energized to defrost the wheel.
- **Modulate Wheel:** When frosting is occurring, the wheel slows to allow defrosting to occur.
- **Cycle Wheel:** When frosting is occurring, the energy wheel is cycled off for a defrost cycle time (5 minutes). After the defrost cycle time, the wheel is re-energized to continue normal operation. The controller will not allow another defrost cycle for a minimum normal operating cycle time (30 minutes).
- **Timed Exhaust:** When frosting is occurring, the supply fan is cycled off along with the tempering for a defrost cycle time (5 minutes). The exhaust fan will continue to run allowing the warm exhaust air to defrost the wheel. After the defrost cycle time, the supply fan and tempering are re-energized to continue normal operation. The controller will not allow another defrost cycle for a minimum normal operating cycle time (30 minutes).

Alarms


The microprocessor controller includes a digital output for remote indication of an alarm condition, which connects via the **J15** port. Possible alarms include:

- **Dirty Filter Alarm:** If the outside air or return air filter differential pressure rises above the differential pressure switch setpoint, the microprocessor controller will activate an alarm.
- **Supply and Exhaust Air Proving Alarm:** Microprocessor controller monitors proving switch on each blower and displays an alarm in case of blower failure.
- **Sensor Alarm:** Microprocessor controller will send an alarm if a failed sensor is detected (temperature, pressure, relative humidity).
- **Supply Air Low Limit:** If the supply air temperature drops below the supply air low limit (35°F), the microprocessor controller will de-energize the unit and activate the alarm output after a preset time delay (300s).
- **Other Alarms:** Wheel Rotation, High Wheel Pressure, High/Low Refrigerant Pressure.


Large Controller Overview

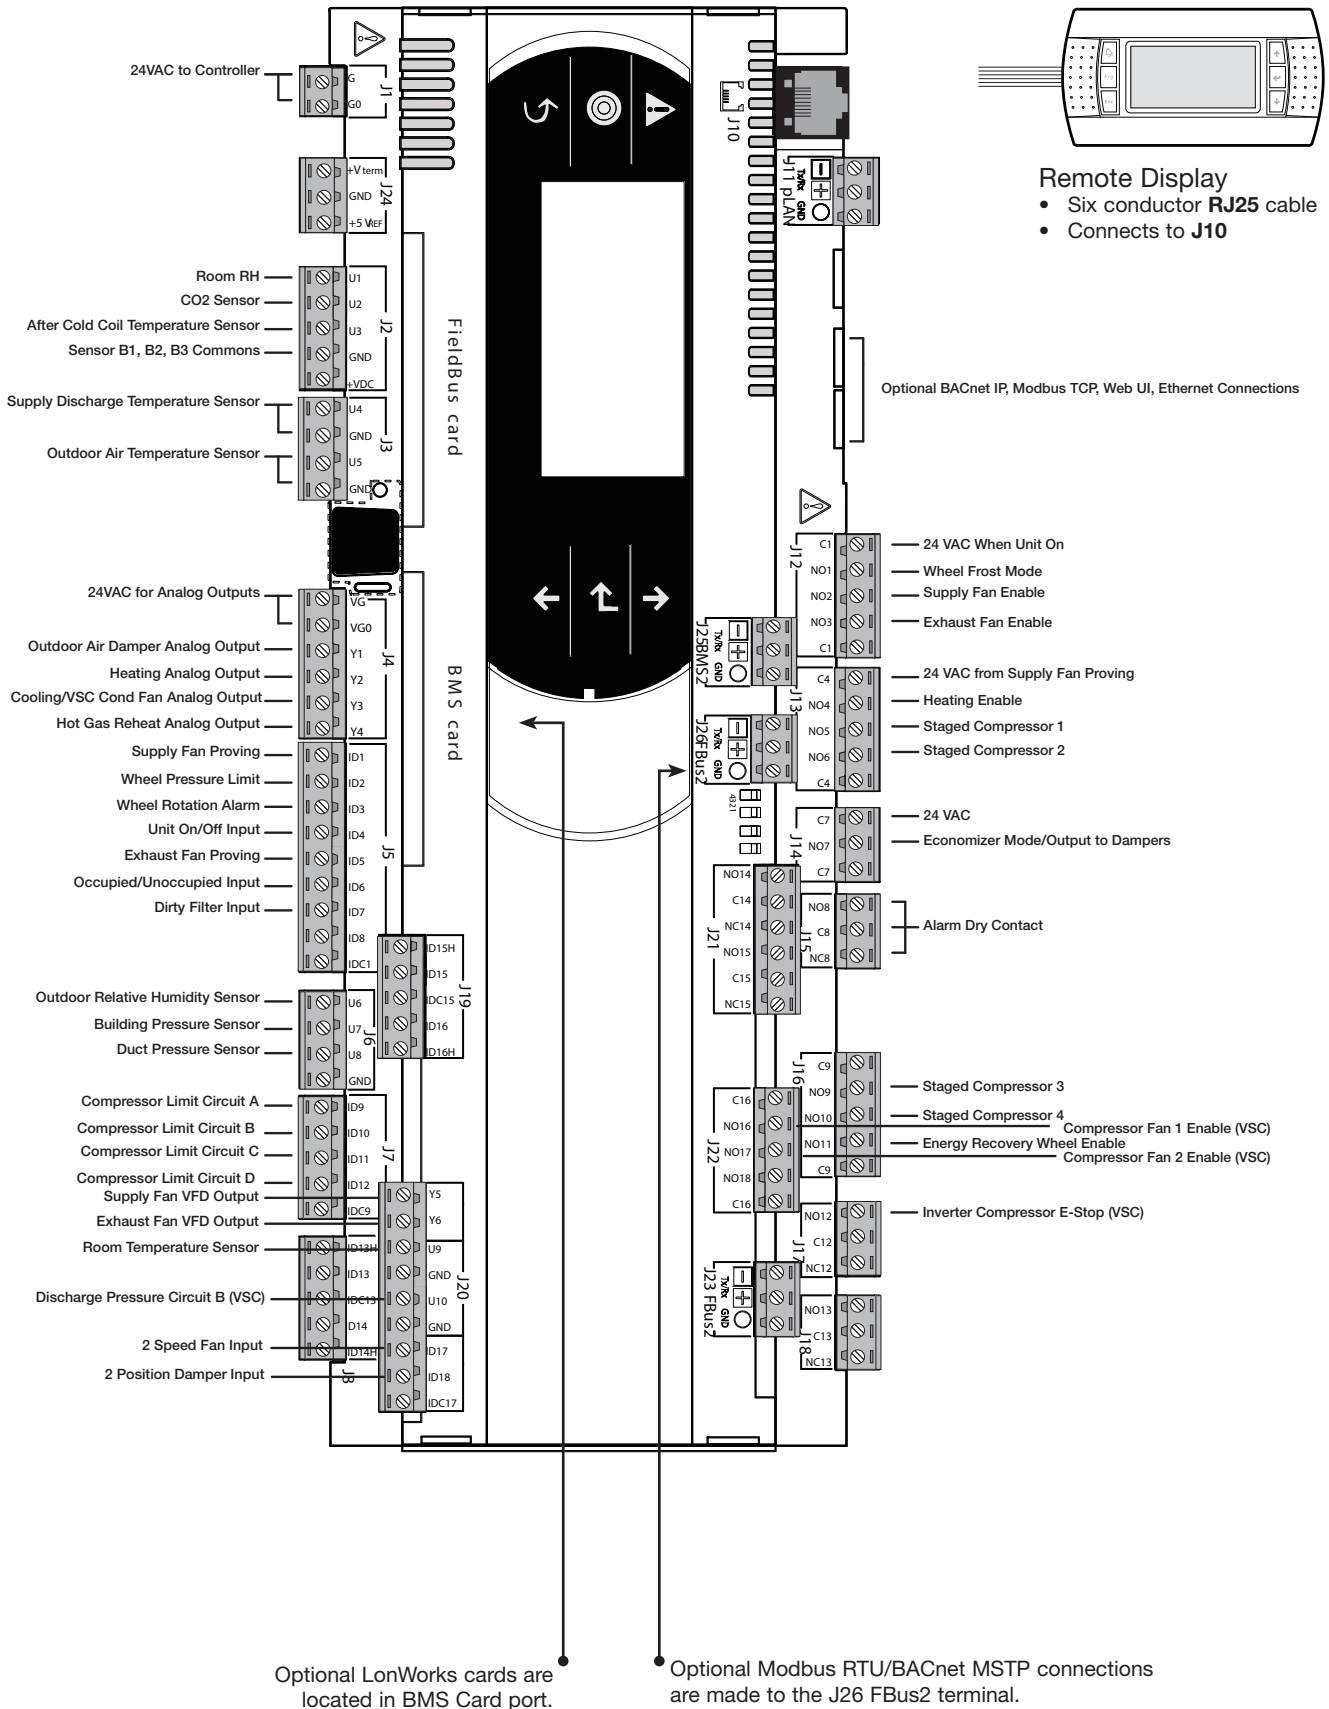

Medium Controller Overview

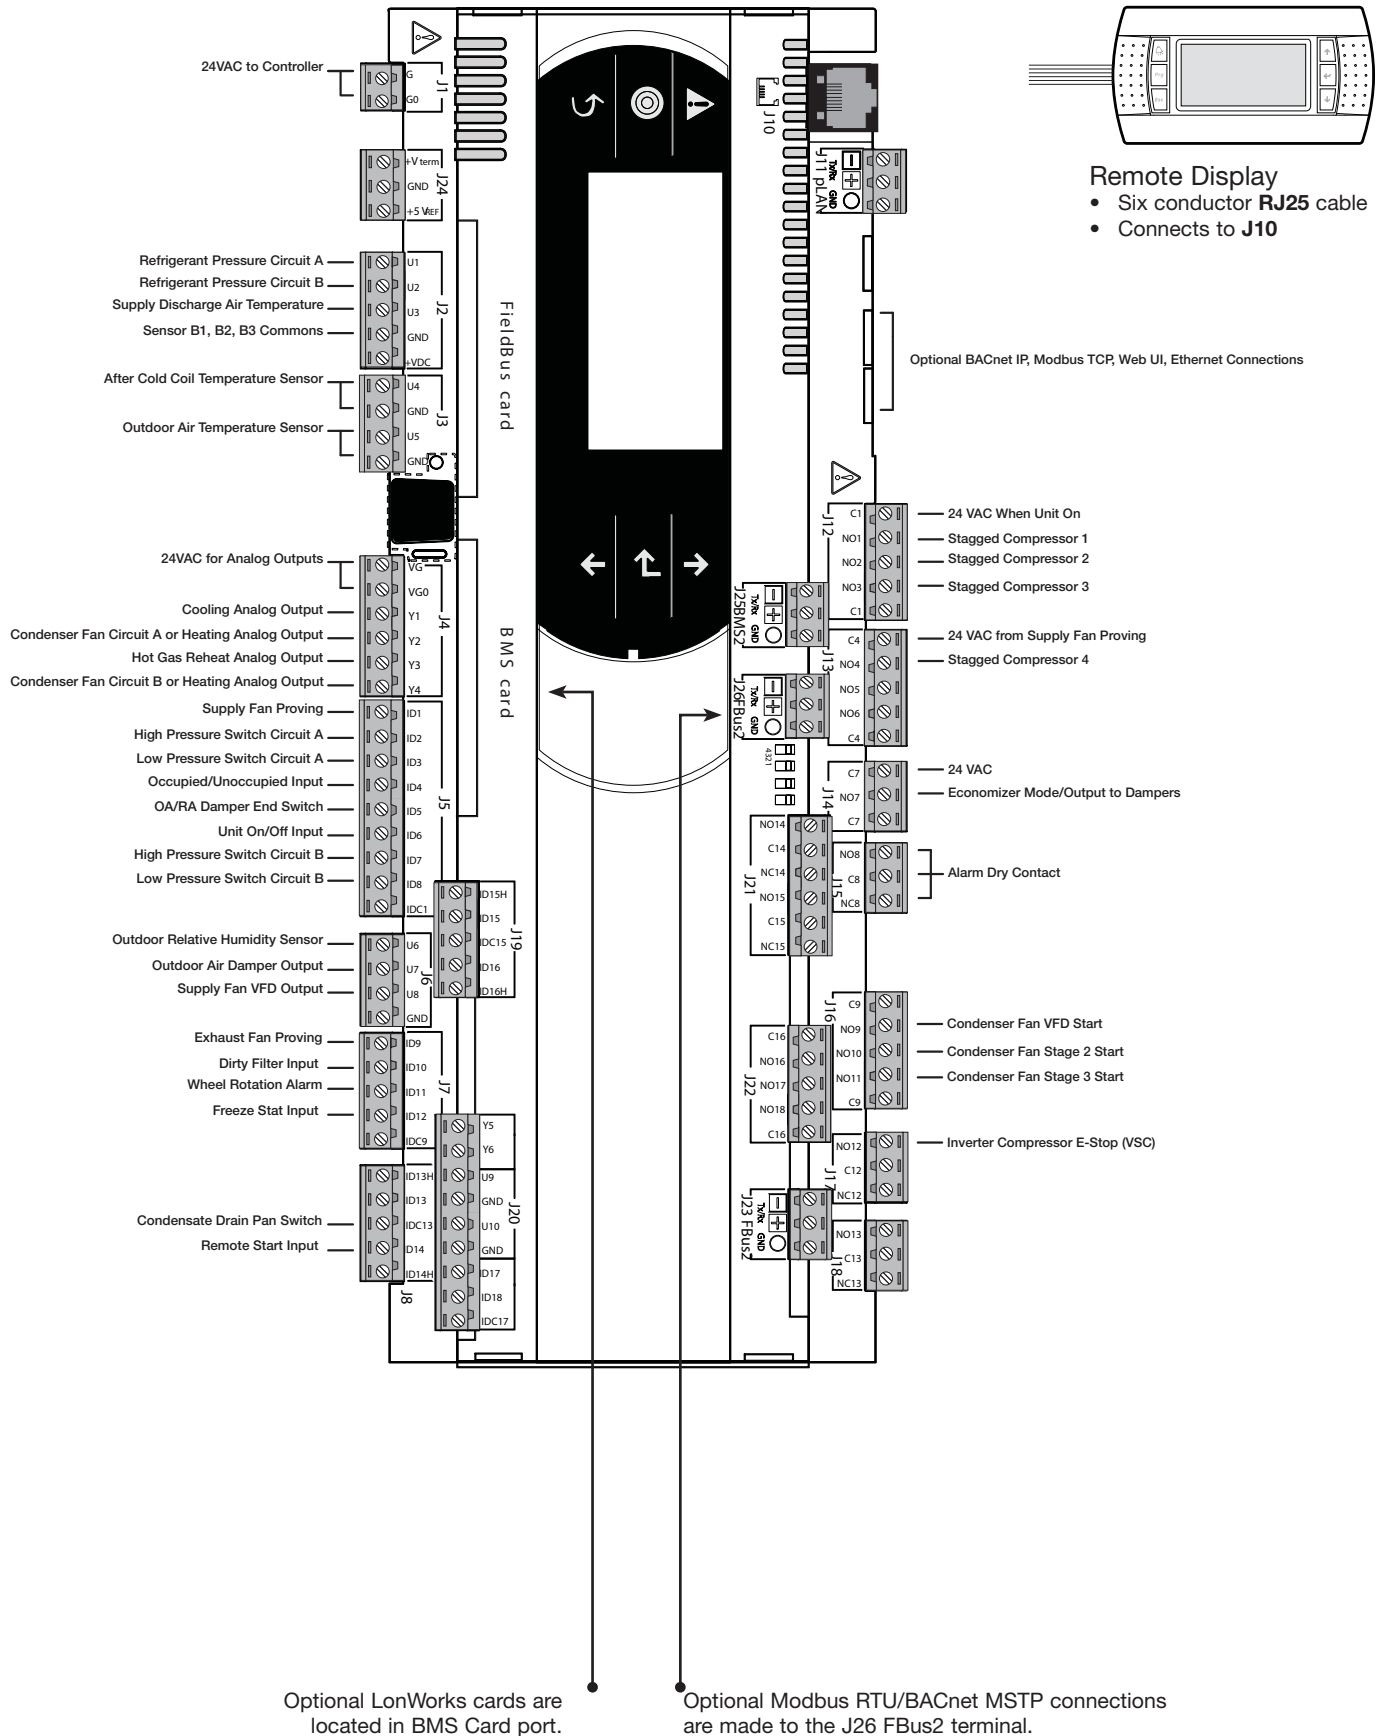


c.pCOe - Expansion Board Overview, Medium Controller Arrangement

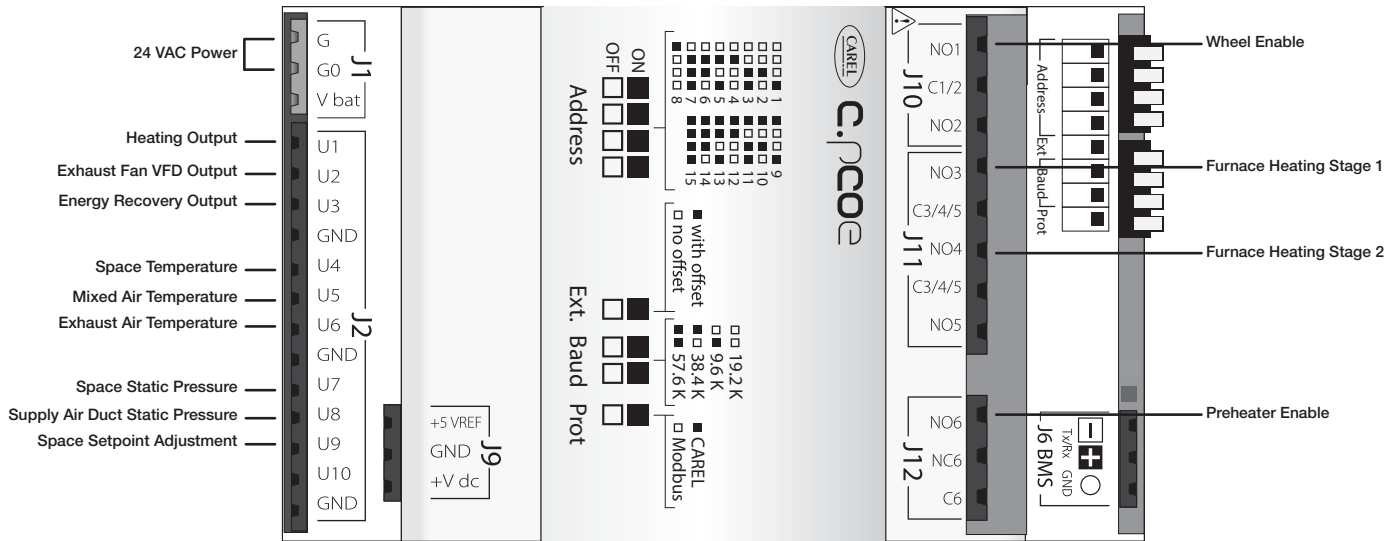


The expansion board is an I/O module that can be used to monitor additional statuses or provide commands from medium board controller.

pCOe - 4:1 Furnace Overview

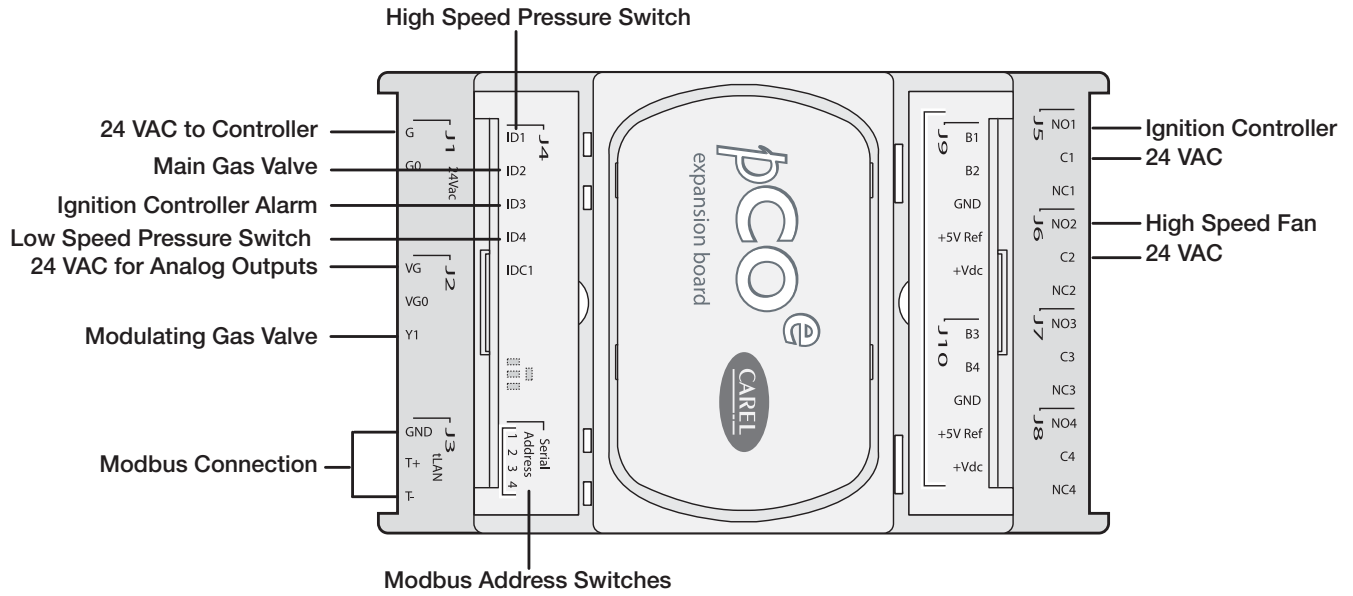

pCOe - High Turndown Furnace

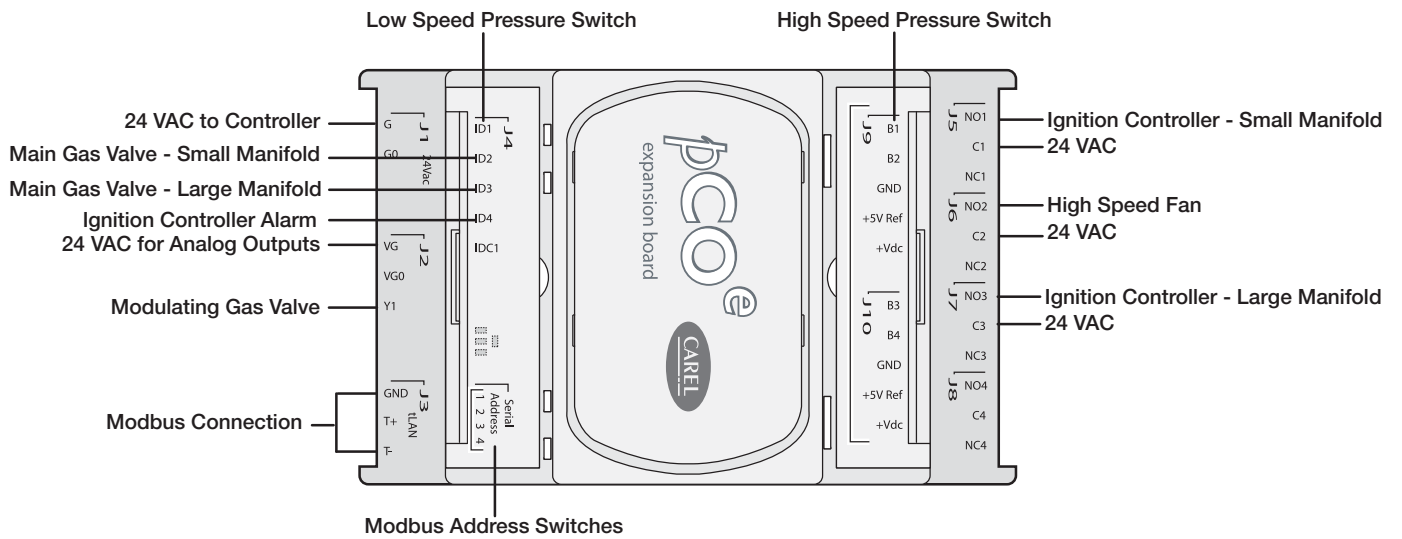

Display Use

The microprocessor controller is located in the unit control center. The face of the controller has six buttons, allowing the user to view unit conditions and alter parameters. The microprocessor controller is pre-programmed with easy to use menus. A remote display is also available, which connects via the **J10** port. A six wire patch cable is needed.


Keypad Description		
Button	Description	Functions
	Main Menu	Press to go directly to the Main Menu from any screen. From the Main Menu, navigate to the following screens: <ul style="list-style-type: none"> • Unit Enable • Unit Status • Ctrl Variables • Alarm Menu
	Alarm	The Alarm button flashes when there is an active alarm. Press to view active alarms. Press twice to go to the alarms reset screen.
	Escape	Press from the Main Menu to view the Unit Status screen. Press to go back one menu level. Press when editing a variable to cancel editing.
	Up	Press to navigate through the menus/screens. Press after entering a variable to increase a current value.
	Enter	Press to enter a highlighted menu or screen item. Press to enter a writable variable and press again to confirm the new variable value.
	Down	Press to navigate menus/screens. Press after entering a variable to decrease the current value.
		Virtual keypad/display on web interface only. These two buttons on the virtual keypad/display are used to simulate two-button actions on the handheld keypad/display. To simulate pressing two buttons simultaneously: <ol style="list-style-type: none"> 1. Click on 2-Button Click. 2. Then, sequentially click on two keypad buttons (Main, Alarm, Escape, Up, Enter, Down). To simulate pressing and holding two buttons simultaneously: <ol style="list-style-type: none"> 1. Click on 2-Button Hold. 2. Then, sequentially click on two keypad buttons (Main, Alarm, Escape, Up, Enter, Down).

Example of Parameter Adjustment

Supply air low limit

Alarm when supply is below: 35.0° F



Alarm delay: 300s

The cursor always begins in the upper left corner of the display and will be blinking. Press the  button to move the cursor down for parameter adjustment.

Supply air low limit

Alarm when supply is below: 32.0° F


Alarm delay: 300s

Once the cursor has reached the desired parameter, press the   buttons to adjust the value.

Supply air low limit

Alarm when supply is below: 32.0° F

Alarm delay: 300s

When satisfied with the adjustment, press the  button to save the parameter. When finished, make certain the cursor is in the upper left corner. If the cursor is not in the upper left corner, the changes will not be saved. The cursor must be in the upper left corner to enable screen advancement.

Web User Interface

The Web User Interface allows access to the unit controller through the building network. Reference Cntrl Variables/Advanced/Network Settings to set the IP network protocol. Once proper communication is established, the user can click on the follow tabs:

Overview – Includes a functioning unit graphic, monitoring points, and active setpoint adjustment.


Alarm – Shows current and cleared alarms.

Unit Display – Mimics the unit controller display. Allows the user full access to the controller without physically being at the unit.

Trending – User can view past and present controller points.

Information – Provides manufacturer support information as well as IOM resources.

Service – User must be logged with service access criteria (9998). Once proper login is established, the user can view configured input/output points associated with the unit controller

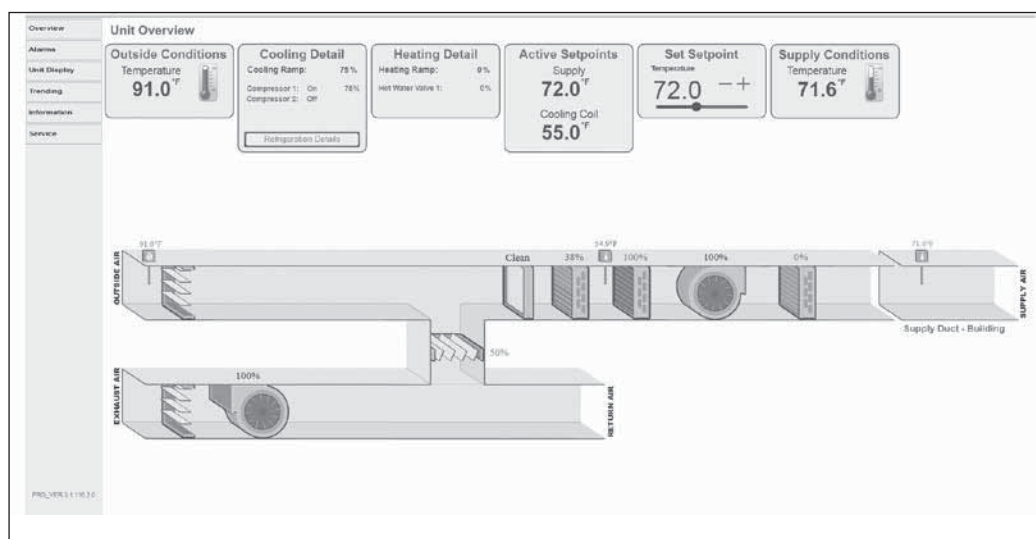

Main Menu Navigation

Unit Enable

Main Status

↳ Unit Status

↳ Input Output Status

Note:
Additional status screens are displayed depending on unit configuration. Screens may include, but are not limited to:

- Occupancy
- Damper positions
- Fan status
- Airflow
- Setpoints
- Economizer
- Energy recovery
- Cooling
- Circuit pressure
- Heating
- Dehumidification
- Static pressure

Ctrl Variables

↳ Temp Control

↳ Dehumidification

↳ Refrigeration

↳ Compressor Control

↳ Pressure Control

↳ Damper Control

↳ Energy Recovery

↳ Fan Control

↳ Supply Fan Control

↳ Exhaust Fan Control

↳ Occupancy

↳ Advanced

↳ Login

Note:
The Advanced menu is read-only. The service password is required to change these settings. Reference the Advanced menu section for more information.

↳ Manual Overrides

↳ Adv. Setpoints*

↳ Network Settings

↳ Backup/Restore

↳ IO Status/Offset*

↳ IO Config

↳ Unit Config

↳ Unit Settings*

↳ Service Info*

↳ Alarm Management

↳ Shutdown Alarms

↳ General Alarms

*Consult factory for more information.

Alarm Menu

↳ Active Alarms



↳ Reset Alarms


↳ Alarm History

↳ Clear History

↳ Export History

Unit Status Overview

The microprocessor controller will revert to a default main menu loop. This loop includes several screens to view the operating conditions of the unit. Scroll through the menu screens by using the   buttons.

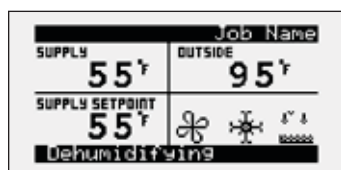








THE INITIAL MENU SCREEN DISPLAYS THE JOB NAME, UNIT TAG, UNIT STATUS, OUTSIDE AIR CONDITIONS, SPACE CONDITIONS AND SETPOINTS.

Possible modes include:

- Off/Standby
- Unoccupied Start
- Dampers Open
- Fan Start Delay
- Fans Starting
- Startup Delay
- System On
- Soft Shutdown
- System Disabled
- Remote Off
- Shutdown Alarm
- Fans Only
- Economizing
- Cooling
- Dehumidifying
- Heating
- HGRH Purging
- Defrost Active
- Overrides Active
- Expansion Offline


Unit Status Screen Symbols

Symbol	Indicates
	Supply air fan status. Rotation indicates airflow; static blades indicate no airflow.
	Cooling
	Heating
	Dehumidifying
	Economizing
	Defrost

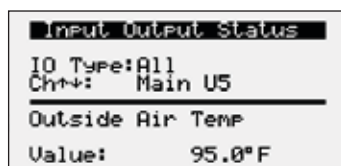


INPUT OUTPUT STATUS

Displays real time conditions from sensors located in the unit and building space if equipped with space mounted sensors. Controller output conditions can also be viewed from this screen. To view the desired input/output point, the user must select the desired channel. Reference the Controller Overview section in this IOM for individual point locations.

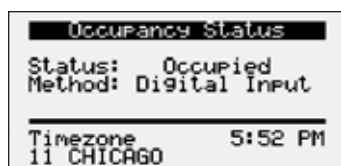


OCCUPANCY STATUS

Displays current status of occupancy and the configured occupancy control method and time zone.

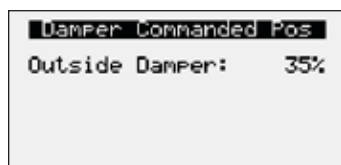

DAMPER COMMANDED POS

This screen appears if equipped with modulating outdoor air and recirculated air dampers. Displays current position of the outdoor air damper. Recirculating air damper position is the inverse of outside damper position.

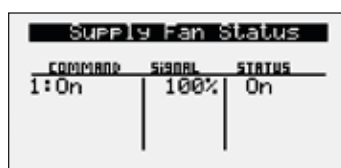

SUPPLY FAN STATUS

This screen displays the fan enable command, fan proving status, and the supply fan ramp being sent from the controller to the VFD. The minimum and maximum speeds are set in the VFD (Reference unit Installation and Operation Manual for VFD programming). The controller can modulate the fan between the min and max speeds via an analog output.

Unit Status Overview

Exhaust Fan Status		
COMMAND	SIGNAL	STATUS
1:On	100%	On

EXHAUST FAN STATUS

This screen displays the fan enable command, fan proving status, and the exhaust fan ramp being sent from the controller to the VFD. The minimum and maximum speeds are set in the VFD (Reference unit Installation and Operation Manual for VFD programming). The controller can modulate the fan between the min and max speeds via an analog output.

Airflow Status	
Exh Fan:	0
OAD:	0

AIRFLOW STATUS

This screen displays the current status of airflow volumes if the unit is provided with airflow monitoring.

Ambient Lockout Status	
Heating:	Disabled
Cooling:	Allowed
Outside Temp: 95.0°F	

AMBIENT LOCKOUT STATUS

Displays heating and cooling lockout status based on the outside air ambient temperature. Ambient lockouts for heating and cooling can be altered by entering Main Menu/Ctrl Variables/Temp Control/Cooling or Heating.

Outside Reset	
Outside Temp:	95.0°F
Supply Spt:	55.0°F
Active Spt:	55.0°F

OUTSIDE RESET

This screen will be active if the controller is configured for outside air reset. The heating and cooling devices modulate to maintain the supply air temperature setpoint as determined by the outside reset calculation.

Active Reset	
Supply Temp:	70.0°F
Supply Spt:	72.0°F
Cooling Spt:	74.0°F
Heating Spt:	70.0°F
Active Spt:	72.0°F

ACTIVE RESET

This screen will be active if temperature control mode is set for space or return air reset. The supply temperature setpoint is calculated based on the active setpoint and the current space or return temperature. The calculated setpoint is scaled between the supply temperature minimum and maximum setpoints determined by the current mode of operation.

Supply Setpoint	
Supply Temp:	71.5°F
Setpoint:	72.0°F

SUPPLY SETPOINT

Displays current supply temperature and supply temperature setpoint to be achieved.

Economizer Ramp	
Setpoint:	72.0°F
Temp:	71.5°F
Ramp:	Disabled
Mode:	0%
Outside Dry Bulb	

ECONOMIZER RAMP

The economizer ramp screen will be active if the unit is configured for an economizer control method. This screen displays the economizer setpoint, supply air discharge temperature, economizer ramp status, and economizer control mode of control. Economizer control mode options include, outside dry bulb, outside enthalpy, comparative dry bulb, and comparative enthalpy.

CO ₂ Ramp Output	
Setpoint:	1000PPM
CO ₂ Level:	0PPM
Ramp:	Disabled
0%	

CO₂ RAMP OUTPUT

The CO₂ Ramp Output screen will be active if the unit is configured for CO₂ control. This screen displays the CO₂ setpoint, CO₂ level from the space, and the status of the control ramp.

Energy Recovery	
Status:	Enabled
Ramp:	100%
100% = Full Speed	

ENERGY RECOVERY WHEEL STATUS

This screen provides overall status of the energy recovery wheel.

Unit Status Overview

```
Defrost Ramp Output
Setpoint:      5.0°F
Outside Temp:  1.2°F
Press Switch:  Normal
Ramp:          0%
```

```
Cooling Ramp 1
Setpoint:      72.0°F
Supply:        71.5°F
Ramp: Enabled  27%
Capacity:      27%

Press ENTER for detail
```

```
Compressor Request
COMPRESSOR    RAMP    CIRCUIT
1:On  26%    1      A
```

```
Heating Ramp
Setpoint:      72.0°F
Supply:        71.5°F
Ramp: Disabled  0%
```

```
Dehumidification
Status: Enabled
Based On:
OAT > Coil Set+Offset

Overcooled: No
Enable Delay: 0s
```

```
HGRH Ramp Output
Setpoint:      55.0°F
Supply Temp:   55.0°F
Ramp: Enabled  9%
Act. HGRH Circuits:
A,
```

```
Supply Space Static
Output:        0.0%
Static:        0.000"wc
Setpoint:      0.050"wc
```

```
Supply Duct Static
Output:        0.0%
Static:        0.000"wc
Setpoint:      1.000"wc
```

DEFROST RAMP OUTPUT

This screen only appears if the unit has an energy recovery wheel and a frost control method was provided on the unit.

Upon sensing a high differential pressure across the energy wheel, the unit will go into defrost if the outside air temperature is below the defrost temperature setpoint.

COOLING RAMP

This screen displays the active setpoint, supply discharge temperature, cooling enable/disable, cooling ramp being sent from the controller, and the overall capacity being demanded.

COMPRESSOR REQUEST

The compressor request screen will be active if the unit is equipped with DX cooling. Screen displays overall status of individual compressor operation being sent from the unit controller. Example: Circuit A compressor enable (On) with modulating value of 26%.

HEATING RAMP

This screen displays the active setpoint, supply air temperature, heating enable/disable, and heating ramp being sent from the controller.

DEHUMIDIFICATION

This screen will display the overall dehumidification status and selected mode of dehumidification control.

The following dehumidification modes are available when the space is in occupied mode:

- Cold coil setpoint plus offset (10°F)
- Inside RH*
- Inside dew point*
- Outside dew point
- Inside RH or inside dew point*
- Inside RH or inside dew point or outside dew point
- Inside RH and inside dew point*
- Inside RH and inside dew point or outside dew point

*Available during unoccupied mode.

HGRH RAMP OUTPUT

This screen will display overall hot gas reheat status which includes active setpoint, supply air discharge temperature, hot gas reheat enable/disable, and hot gas reheat control loop being sent from the controller.



SUPPLY SPACE STATIC

This screen displays status points if the unit is configured for space static pressure control. Status points include controller output ramp, static pressure in the space, and the space static pressure setpoint. Similar status screen will appear for the exhaust fan if the unit is configured for exhaust fan space static control.

SUPPLY/RETURN DUCT STATIC


This screen displays status points if the unit is configured for duct static pressure control. Status points include controller output ramp, static pressure in the duct, and the duct static pressure setpoint. Similar status screen will appear for the exhaust fan if the unit is configured for exhaust fan duct static control.

Menu

The controller is equipped with several menus to help guide users with altering program parameters. The following menus can be accessed by pressing the  button. To enter the desired menu, press the  button.

Unit Enable

The **Unit Enable** menu allows the user to enable and disable the unit through the controller. Reference sequence of operation for additional unit starts/stop details.

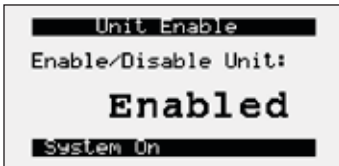

The unit ships from the factory in a disabled state. To allow the unit to operate, the controller must receive a run command from digital input ID4. **Jumper unit terminals R - G to allow the unit to operate.**

Change to (Enabled/Disabled): Enables user to manually turn unit on/off via display. Unit terminal **G** must have 24 VAC power to enable the unit.


Control Variables

The **Controls Variables** menu allows the user to view and adjust unit control parameters.

Control Variables

 Temp Control

The **Temperature Control** menu allows the user to view and adjust temperature control conditions of the unit.

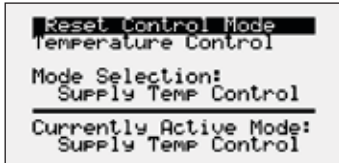

METHOD FOR TEMPERATURE CONTROL


Possible Setpoint Sources:

Supply Temp Control – The supply discharge setpoint to be a constant value (e.g. 72°F). Reference Temperature Setpoint screen for setpoint adjustment.

Space Reset – The controller will reset the supply air temperature set point to maintain the room temperature set point (requires room temp sensor). Reference the Temperature Setpoint screen for room setpoint adjustment.

Return Reset – The controller will reset the supply air temperature set point to maintain the return air temperature set point (requires duct mounted return air temp sensor). Reference the Temperature Setpoint screen for return air setpoint adjustment.

OA Reset – The controller monitors the outdoor air temperature and adjusts the desired supply temperature set point accordingly. For example, when the outdoor air is below 55°F, the controller will change the supply set point to 70°F. If the outdoor air is above 65°F, the controller will change the supply set point to 55°F. If the outdoor air temperature is between 55°F and 65°F, the supply set point changes according to the outdoor air reset function. A visual representation of the outdoor air reset function is shown below. Reference Outside Setpoints for minimum and maximum outside air limits.

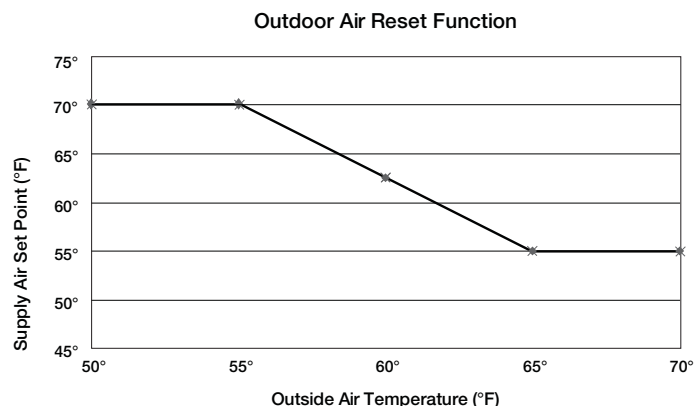

```

Outside Setpoints
  Outside Reset
  Maximum:      65.0°F
  Minimum:      55.0°F

  Outside Temperature
  Minimum and Maximum
  used to reset supply.
  
```

OUTSIDE SETPOINTS

This screen only appears if outside reset is selected as the reset control mode.

```

Temperature Setpoint
  Temp SPT:      72.0°F

  Supply Temperature or
  Reset Target Temp
  based on current mode.
  
```

TEMPERATURE SETPOINT

This screen only appears if supply temp control, space reset, or return reset is selected as the reset control mode.

Possible Setpoint Sources:

Local – The room set point will be constant; set from screen (e.g. 72°F).

BMS – The BMS can directly control the room temperature set point (requires BMS communication option).

T-Stat – The room set point will be adjustable from the room thermostat.

Reference Appendix: Room Thermostat Quick Start for additional information.

```

Heat Cool Deadband
  Deadband:      4.0°F

  Setpoint:      72.0°F
  Cooling Spt:   74.0°F
  Heating Spt:   70.0°F
  
```

HEAT COOL DEADBAND

This screen only appears if space reset or return air reset is selected as the reset control mode. The heat cool deadband allows for separate cooling and heating setpoints when the reset control mode is set for space reset or return air reset.

```

Supply Setpoints
  Cooling Mode
  Maximum:      90.0°F
  Minimum:      55.0°F

  Minimum and Maximum
  reset values.
  
```

SUPPLY SETPOINTS

Cooling and heating supply setpoints screens only appear if outdoor reset, space reset, or return air reset is selected. These screens allow the user to set the minimum and maximum setpoint limits for cooling or heating operation. The controller will adjust the supply temperature setpoint between the set limits depending on mode of operation.

```

Supply Setpoints
  Heating Mode
  Maximum:      90.0°F
  Minimum:      55.0°F

  Minimum and Maximum
  reset values.
  
```

```

Mode Switch Delay
  Delay:         120s

  Delay before switching
  between heating and
  cooling modes.
  
```

MODE SWITCH DISPLAY

This screen displays the delay time required before switching between heating and cooling mode.

```

Startup Delay
  Delay:         30s

  Delay before enabling
  unit ctrl at startup.
  
```

STARTUP DISPLAY

This screen displays the delay time after the fans have started and tempering begins


```

Cooling
  Amb Lockout:   55.0°F

  Outside Temp:  95.0°F
  Currently Allowed
  
```


COOLING LOCKOUT

This screen displays the cooling lockout temperature. Cooling will be disabled when outside air is below the cooling lockout temperature (55°F).

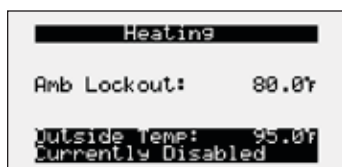

HEATING LOCKOUT


This screen displays the heating lockout temperature. Heating will be disabled when outside air is above the cooling lockout temperature (80°F).

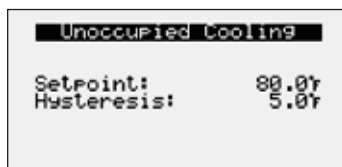

SPACE SETPOINTS DURING THE UNOCCUPIED MODE

The controller will have separate screens for unoccupied cooling and heating setpoints. Reference Occupied control variables for further detail.

Unoccupied Cooling Example: If setpoint = 80°F, unoccupied cooling is enabled when room equals 80°F and above. Unoccupied cooling is disabled when room temperature is below 75°F.

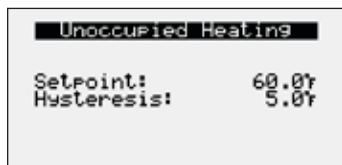


Unoccupied Heating Example: If setpoint = 60°F, unoccupied heating is enabled when room temperature equals 60°F and below. Unoccupied heating is disabled when room temperature is above 65°F.

Control Variables

↳ Dehumidification

The **Dehumidification** menu allows the user to view and adjust dehumidification control parameters.

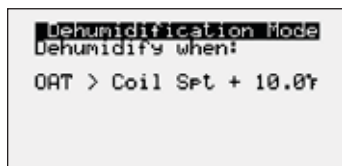


THIS SCREEN DISPLAYS METHOD FOR DEHUMIDIFICATION.

Possible Methods:

- Outside Air Temp is greater than cold coil setpoint plus offset (10°F)
- Inside RH*
- Inside dew point*
- Outside dew point
- Inside RH or inside dew point*
- Inside RH or inside dew point or outside dew point
- Inside RH and inside dew point*
- Inside RH and inside dew point or outside dew point

*Available during unoccupied mode.

There must be a constant call for dehumidification for the duration of the enable delay for dehumidification mode to become enabled. The call remains active until conditions are satisfied and dehumidification mode has been active for the minimum active time. Reference Ctrl Variables/Advanced/Unit Config/Unit Configuration Occupied Dehum Call for dehumidification method options.

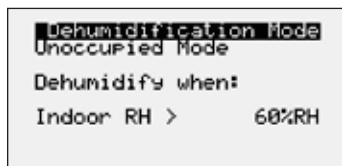

THIS SCREEN DISPLAYS METHOD FOR DEHUMIDIFICATION IN UNOCCUPIED MODE.

If the unit is unoccupied while there is a dehumidification call, the unit will start and dehumidify until the unoccupied dehumidification setpoints are satisfied. The above dehumidification modes marked with an * indicate availability during unoccupied mode. The unoccupied dehumidification mode can be set differently than the occupied dehumidification mode. Reference Ctrl Variables/Advanced/Unit Config/Unit Configuration Unoccupied Dehum Call for dehumidification method options.


```

Dehumidification
Hysteresis
Occupied:      4.0%RH
                2.0°F
Unoccupied     5.0%RH
                2.5°F
    
```

THIS SCREEN DISPLAYS HYSTERESIS FOR ENABLING DEHUMIDIFICATION DURING OCCUPIED AND UNOCCUPIED CONDITIONS.

%RH for indoor RH control and °F for indoor dew point control. Example: If indoor RH setpoint = 50%, dehumidification is enabled when indoor RH equals 50% and above. Dehumidification is disabled when indoor RH is below 44%.

```

Dehumidification Mode
On Delay:      2m
Minimum On time: 15m
    
```

THIS SCREEN ALLOWS ADJUSTMENT FOR DELAY AND MINIMUM ON TIME FOR DEHUMIDIFICATION MODE.

Times are in place to prevent short cycling between dehumidification and other control modes.

```

Cold Coil Setpoint
Coil Set:      55.0°F
    
```

THIS SCREEN DISPLAYS THE TEMPERATURE SETPOINTS FOR THE COOLING COIL.

This screen only appears if the unit is equipped with cooling. When in dehumidification mode, the controller will maintain the active cold coil set point. The active set point will be determined by the set point source.

Possible Set Point Sources:

Local – The supply set point will be constant; set from screen (e.g. 55°F).

BMS – The cold coil leaving air temperature set point can be adjusted over the BMS via the dehumidification set point (Reference Points List).

```

Priority Selection
Dehum>Temp:    ☐
Coil Offset:    0.0°F
Stop dehumidifying if
Space/Return is cold
or apply offset.
    
```

THESE SCREENS DISPLAY DEHUMIDIFICATION PRIORITY SELECTIONS.

The following priorities are used to determine what is more important in the unit: temperature over dehumidification or heating over dehumidification. Both priority selections determine when the unit is allowed to dehumidify.

1. Temperature over Dehumidification

Determines when the unit is allowed to dehumidify based on the space/return air temperatures.

a. Temperature - If temperature is set as the priority and the space or return air is over cooled, dehumidification is locked out until the space or return temperature is no longer over cooled.

b. Dehumidification - If the priority is dehumidification and the space or return air is over cooled, the coil offset will be added to the coil leaving setpoint. (Default 0°F offset).

c. Over Cooled - If space or return reset is enabled, the target is considered over cooled when it is 4°F below setpoint for 5 minutes. It remains over cooled until the target is at setpoint and over cooled has been active for a minimum of 5 minutes.

2. Heating over Dehumidification

Determines when the unit is allowed to dehumidify when heating is active.

a. Heating - If priority is set to heating, the unit locks out dehumidification while heating is active.

b. Dehumidification - If priority is set to dehumidification, the unit is allowed to switch to dehumidification when heating is active.

```

Priority Selection
Heat>Dehum:    ☒
Allows switching to
Dehum when in heating.
    
```

```

Dehum force Comp On
C19 RAMP 1:    ☒
C19 RAMP 2:    ☐
C19 RAMP 3:    ☐
C19 RAMP 4:    ☐
Forces 1 comp to run
when in dehumid mode.
    
```

THIS SCREEN DISPLAYS THE COMPRESSOR DEHUMIDIFICATION FORCE.

In dehumidification mode, the lead compressor will continue to run as long as the dehumidification mode sequence has been enabled in order to prevent compressor cycling and potential reevaporation of moisture. To disable this operation and allow the compressor to cycle in dehumidification mode, uncheck the applicable cooling ramps.

Menu


Control Variables

☞ Refrigeration

The **Refrigeration** menu allows the user to view and adjust compressor and condenser settings, if equipped.

REFRIGERATION MENU

Consult factory prior to adjusting parameters in Refrigeration Menu.

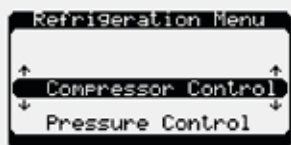


Control Variables

☞ Damper Control

The **Damper Control** menu's allows the user to adjust damper control setpoints. Economizer setpoint adjust will also be found at this location if the unit is equipped with outside air and recirculation dampers.

THIS SCREEN ALLOWS ADJUSTMENT FOR DELAY TIME BETWEEN DAMPER OPENING AND FAN OPERATION.

This timer allows the damper to open before the fan start sequence begins. This prevents the fans from having to overcome higher static pressure when the damper(s) are opening.

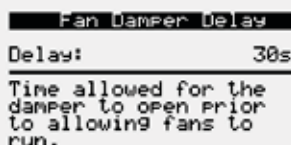


THIS SCREEN DISPLAYS THE OUTDOOR AIR DAMPER SET POINT AND ONLY APPEARS IF UNIT IS EQUIPPED WITH A MODULATING OUTDOOR AIR AND RECIRCULATING DAMPER.

The set point is the proportional percentage of the outdoor air damper being open.

0% = Full recirculation air

 100% = Full outdoor air



Minimum Position – When in the occupied mode, the active set point will be equal to a local minimum OA set point, which may be constant or reset by fan speed if equipped with a modulating supply fan. The OA damper set point can then be further adjusted between the minimum and maximum OA settings with sequences such as DCV CO₂, Building Pressure and Economizer.

Maximum Position – Each sequence that can adjust the OA damper set point contains a maximum position to prevent excess OA. The active set point will be determined based on the greatest demand of the configured sequences. For example, if a unit is equipped with a DCV CO₂ and an economizer sequence, the OA damper set point will react to an economizer demand even if the CO₂ set point is satisfied. Likewise, if economizer is not available but CO₂ is above set point, the OA damper will open to satisfy the CO₂ set point.

Economizer – The active set point will be reset based on Economizer demand, between the minimum and maximum positions.

Possible Setpoint Sources:

Local – The minimum outdoor air percentage is constant; set by the controller.


SF Reset – The min and max positions are reset by the supply fan speed.

BMS – The BMS can directly control the OA damper position up to the max BMS percentage.

Building Pressure – Damper position is reset by a building pressure control loop.

DCV CO₂ – Damper position is reset by a demand-controlled ventilation control loop based on room CO₂ levels.

2 Position – Damper position is reset to “2-Pos/Max Econ:” set point when a contact closure is made. The 2-position damper operation can also be setup to bring the unit into temporary occupied mode until the contact is broken (Max Ventilation Mode - enabled in manufacturer menu settings).

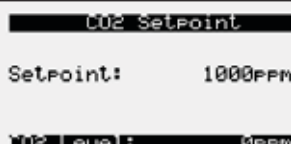

```

Economizer Mode
Selected Mode:
Outside Dry Bulb
-----
Active Mode:
Outside Dry Bulb

```

```

Economizer Settings
Outside Dry Bulb
Setpoint:      65.0°F
Sensor Status: Valid
Mode Status: Not Ready
Econ Status: Disabled

```

```

Economizer Settings
Outside Enthalpy
Setpoint:      23.0btu/lb
Sensor Status: Invalid
Mode Status: Not Ready
Econ Status: Disabled

```

```

Economizer Settings
Comparative Dry Bulb
Sensor Status: Invalid
Mode Status: Not Ready
Econ Status: Disabled

```

```

Economizer Settings
Comparative Enthalpy
Sensor Status: Invalid
Mode Status: Not Ready
Econ Status: Disabled

```

```

Economizer Settings
Hysteresis
Temperature:   2.0°F
Enthalpy:      2.0btu/lb

```

```

Economizer Settings
Energy Recovery
Reduction Only: ☐
-----
When true, economizer
will not open the OAD.

```

SCREENS DISPLAY ECONOMIZER CONTROL VARIABLES.

This screen only appears if economizer functionality was provided with a modulating outdoor air damper.

The outside air damper will modulate between the minimum and maximum position to maintain the supply temperature setpoint.

The user can select the economizer control method from the following options:

Outside Dry Bulb – Economizing is allowed when the outside dry bulb is less than the economizer temperature enable setpoint.

Outside Enthalpy - Economizing is allowed when outside enthalpy is less than the economizer enthalpy setpoint.

Comparative Dry Bulb - Economizing is allowed when outside temperature is less than the space or return temperature.

Comparative Enthalpy - Economizing is allowed when outside enthalpy is less than the space or return enthalpy.

THIS SCREEN DISPLAYS THE HYSTERESIS SETTINGS FOR ECONOMIZER CONTROL.

There is a built-in hysteresis that disables economizer above the economizer setpoint.

(Example: If Economizer Outside Dry Bulb = 65°F, economizer operation is disabled above 67°F).

THIS SCREEN DISPLAYS THE ENERGY REDUCTION ONLY CONTROL.

If enabled, the OA damper and recirculation damper will not modulate during economize. Instead, only the energy recovery wheel will be stopped to ensure no energy is transferred from the supply airstream and exhaust airstream.

Control Variables
 Energy Recovery

The **Energy Recovery** menu allows the user to adjust energy recovery wheel sequence setpoints.



THIS SCREEN DISPLAYS THE TEMPERATURE AT WHICH THE UNIT WILL ENABLE FROST CONTROL MODE IF NECESSARY (FACTORY DEFAULT=5°F)

This screen only appears if the unit has an energy recovery wheel and a frost control method was provided with the unit.

Upon sensing a high differential pressure across the energy wheel, the unit will enter defrost mode if the outside air temperature is below this temperature setting. Max Active Time and Min Off Time will be available if the frost control method was provided as timed exhaust or cycle wheel.



THIS SCREEN DISPLAYS THE ENERGY RECOVERY WHEEL JOG FUNCTION

This screen display the energy recovery wheel jog function.

This screen only appears if the unit has an energy recovery wheel and stop wheel economizer method for control.

Momentarily enables the wheel in order to expose a new section to the airstream.

Menu

Control Variables

- ↳ Fan Control
- ↳ Supply Fan Control

The **Supply Fan Control** menu allows the user to adjust exhaust control setpoints

THIS SCREEN DISPLAYS THE SUPPLY FAN DELAY.

The supply fan delay will begin once the damper sequence is complete. This delay can be used to offset starting times between the supply fan and exhaust fan.

THIS SCREEN DISPLAYS MINIMUM AND MAXIMUM SUPPLY FAN SPEED PERCENTAGES.

The speed set point is the proportional percentage of the analog output from the controller to the VFD.

50% Speed = Min speed

100% Speed = Max speed

Possible Setpoint Sources:

Local – The fan speed will be constant; set from screen (e.g. 100%).

BMS – The BMS can directly control the fan speed (requires BMS communication option).

Duct Pressure – Fan speed is determined by duct pressure control loop.

Space Pressure – Fan speed is determined by building pressure control loop.

CO₂ – Fan speed is determined by CO₂ control loop.

Single Zone VAV - The supply fan is modulated in addition to the supply air temperature to satisfy the room temperature set point. A room temperature sensor is required.

2-Speed (High Speed Set Point) - Supply fan speed is reset to maximum speed when a contact closure is made. (Max Ventilation Mode).

THIS SCREEN DISPLAYS SOFT SHUTDOWN ENABLE CONDITIONS.

During a soft shutdown the following will occur:

- Tempering outputs immediately revert back to their off value; while
- Dampers remain open and fans continue to run; until
 - The supply air temperature falls below the soft shutdown enable setpoint minus 5.0°F; or
 - The soft shutdown delay timer has expired.

SUPPLY Fan

Enable Delay: 5s

Adjust delay time to offset starting fans.

SUPPLY Fan

Minimum Speed: 50%

Maximum Speed: 100%

SUPPLY Fan
Constant Volume Setpt

Occupied: 100%

Unoccupied: 60%

SUPPLY Fan
Duct Static

Setpoint: 1.000"wc

Current: 0.000"wc

SUPPLY Fan
Space Static

Setpoint: 0.050"wc

Current: 0.000"wc

CO₂ Setpoint

Setpoint: 1000PPM

CO₂ Level: 0PPM

Soft Shutdown
Enable

Setpoint: 85.00°F

Delay: 120s

SUPPLY TEMP >= Setpt

Control Variables

- ↳ Fan Control
- ↳ Exhaust Fan Control

The **Exhaust Fan Control** menu allows the user to adjust exhaust control setpoints.

```

Exhaust Fan
Enable Delay:      0s
Enable when OAD >= 15%

Adjust delay time to
offset starting fans.
  
```

THIS SCREEN DISPLAYS THE EXHAUST FAN DELAY AND ENABLE BASED ON OUTSIDE AIR DAMPER POSITION.

The exhaust fan delay will begin once the damper sequence is complete. This delay can be used to offset starting times between the supply fan and exhaust fan. This screen also provides the ability to enable the exhaust fan on a set outdoor air damper position if the unit is equipped with a modulating outdoor air damper.

```

Exhaust Fan
Minimum Speed:     25%
Maximum Speed:     100%
  
```

THIS SCREEN DISPLAYS MINIMUM AND MAXIMUM EXHAUST FAN SPEED PERCENTAGES.

The speed set point is the proportional percentage of the analog output from the controller to the VFD.

25% Speed = Min speed

100% Speed = Max speed

```

Exhaust Fan
Constant Volume Setpt
Occupied:          100%
Unoccupied:        60%
  
```

Possible Setpoint Sources:

Local – The fan speed will be constant; set from screen (e.g. 100%).

BMS – The BMS can directly control the fan speed (requires BMS communication option).

Space Pressure – Fan speed is determined by building pressure control loop.

Supply Fan Tracking with Offset – The exhaust fan will track the supply fan, between a minimum and maximum position. An offset can be added to achieve the proper balance.

Outdoor Air Damper Tracking – The exhaust fan will proportionally track the outdoor air damper, between a minimum and maximum position.

Return Duct Static Pressure – Fan speed is determined by duct pressure control loop.

```

Exhaust Fan
Space Static
Setpoint:          0.050"wc
Current:           0.000"wc
  
```

```

Exhaust Fan
Supply Tracking
Offset:            -10%
  
```

```

Exhaust Fan
Return Duct Static
Setpoint:          -2.000"wc
Current:           0.000"wc
  
```


Control Variables
 Occupancy

The **Occupancy** menu allows the user to adjust occupancy control parameters which includes occupancy control mode and schedule.

```

Occupancy Control
Mode:    Digital Input
BMS:     Occupied
Digital In: Occupied
Schedule: Occupied
Timed Ovr: Unoccupied
  
```

THIS SCREEN DISPLAYS THE CURRENT MODE OF OPERATION FOR OCCUPANCY CONTROL. STATUS OF THE OTHER MODE OPTION CAN ALSO BE FOUND ON THIS SCREEN.

This screen allows the user to select the source of determining occupancy. The factory default is terminal ID6 on the controller.

BMS: BMS control (Reference Points List). BMS can be overridden with ID6.

Digital Input: Typically used with a remote time clock, motion sensor or switch.

Always Occ: Controller will always remain in occupancy mode.

Always Unocc: Controller will always remain in unoccupancy mode.

Schedule: Allows the user to set an occupancy schedule for each individual day of the week.

```

Occupancy Schedule
Day: Friday
Schedule
Start Time: 06:00 AM
Stop Time: 06:00 PM
Currently: Occupied
  
```

THIS SCREEN ALLOWS THE USER TO ADJUST THE SCHEDULE.

Requires the user to enter a start time, stop time and the applicable days of the schedule.

```

Unoccupied Start
Enable Modes
Cooling:    [X]
Heating:    [X]
Dehumidification: [X]
  
```

THIS SCREEN DISPLAYS UNOCCUPIED START ENABLE MODES.

This screen only appears if unit is provided with unoccupied recirculation.

This screen allows the user to enable/disable modes of operation when in unoccupied recirculation control.

```

Occ Timed Override
Enable: [ ]
Duration: 60m

Status: Unoccupied
Time Remaining: 0m
  
```

THIS SCREEN DISPLAYS OCCUPANCY OVERRIDE CONDITIONS.

Screen allows the user to override occupancy for a set duration.

Menu

Control Variables

↳ Advanced

User Login

Enter Password: 9998

Current Access:
Service Level

The **Advanced** menu allows the user to access several submenus regarding controller information, controller overrides, network settings, I/O configuration, and unit configuration. Submenu options are read only and will require the user to input proper login criteria. The **service password (9998)** is required to change service access menus. Consult factory for factory level access.

Control Variables

↳ Advanced

↳ Manual Overrides

The Manual Overrides menus are for start-up, commissioning, and troubleshooting.

IG Furnace Setup

Press ENTER to access
IG Furnace Commission

Unit must be running

THIS SCREEN ALLOWS THE USER TO ACCESS THE IG FURNACE COMMISSIONING MENU.

This screen only appears if an indirect gas furnace was provided with the unit. Entering the furnace commissioning menu will step the user through the furnace start-up.

Manual Override Mode

Enable: ☐

Duration: 720m

Time Remaining: 0:00

Status: Disabled

MANUAL OVERRIDE MODE

The Manual Overrides menu is for start-up, commissioning, and troubleshooting. This menu allows the user to override the control loops and specific inputs and outputs.

To access the Manual Overrides submenus, enter the **service password (9998)**. Manual overrides must be enabled at this screen to allow the user to override control loops. Override options must be changed from Auto to Manual for manual control.

Unit On Off

Override: Auto

Value: On

enable Main Override

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE UNIT ON OR OFF.

When manual override is set to enable, use the arrow buttons to turn the unit on or off.

Occupancy

Override: Auto

Value: Occupied

enable Main Override

THIS SCREEN ALLOWS THE USER TO OVERRIDE OCCUPANCY CONTROL.

When manual override is set to enable, use the arrow buttons to change occupancy control.

Supply Fan

Override: Auto

Command: On

Speed: 100%

enable Main Override

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE SUPPLY FAN VFD SPEED.

The speed is the proportional percentage of the analog output from the controller to the VFD.

0% Speed = Min speed (determined by VFD)

100% Speed = Max speed (determined by VFD)

(Reference unit Installation and Operation Manual for VFD programming).

Menu

```
Exhaust Fan
Override: Auto
Command:  On
Speed:    100%
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE EXHAUST FAN VFD SPEED.

This screen only appears if the unit is equipped with a exhaust fan VFD controlled by the microprocessor.

The speed is the proportional percentage of the analog output from the controller to the VFD.

0% Speed = Min speed (determined by VFD)

100% Speed = Max speed (determined by VFD)

(Reference unit Installation and Operation Manual for VFD programming).

```
Outside Damper
Override: Auto
Position:  35%
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE POSITION OF THE OUTDOOR AIR DAMPER.

This screen only appears if the unit is equipped with a modulating outdoor air and recirculation damper. The recirculation damper position will be the inverse of the outdoor air damper position shown.

0% = Outdoor air damper closed

100% = Outdoor air damper fully open

```
Compressor Request
Override: Auto
1: Off   2: Off
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE COMPRESSOR OPERATION

This screen only appears if the unit is equipped with DX cooling. When manual override is set to enable, use the arrow buttons to turn individual compressor requests on or off.

```
Compressor Signal
Override: Auto
1:      0%
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE MODULATING COMPRESSOR CONTROL LOOP.

When manual override is set to enable, use the arrow buttons to change the compressor modulation value.

```
Cooling Ramp 1
Override: Auto
Demand:    0%
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE COOLING OPERATION.

When the cooling control is in the manual mode, use the arrow buttons to vary the cooling output.

Chilled Water: The cooling percent is directly proportional to the 0 - 10 VDC output signal.

0% Cooling = 0 VDC

100% Cooling = 10 VDC

Packaged Cooling: The cooling percent displays compressor engagement as a percent. The compressors are subject to the minimum on/off times and heating/cooling lockouts.

```
Electric Heat
Override: Auto
Elec Heater 1: 100%
Enable Main Override
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE ELECTRIC HEATER OPERATION.

This screen only appears if the unit is equipped with electric post heat. Electric heater percentage is directly proportional to the 0 – 10 VDC output signal.

Menu

```

Heating Ramp
Override: Auto
Demand: 100%
Enable Main Override
  
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE HEATING OPERATION.

When the heating control is in the manual mode, use the arrow buttons to vary the heating output.

```

Economizer Ramp
Override: Auto
Value: 0%
Enable Main Override
  
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE ECONOMIZER CONTROL OPERATION.

When the heating control is in the manual mode, use the arrow buttons to vary the heating output.

```

Hot Gas Reheat Ramp
Override: Auto
Value: 100%
Enable Main Override
  
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE HOT GAS REHEAT OPERATION.

This screen only appears if modulating hot gas reheat option was provided with the unit. When the hot gas reheat loop control is in the manual mode, use the arrow buttons to vary the reheat output.

```

Defrost Ramp
Override: Auto
Value: 0%
Reduces Energy Recovery
100%=Full Byp/MinSpeed
ER RAMP: 100%
Enable Main Override
  
```

THIS SCREEN ALLOWS THE USER TO OVERRIDE THE ENERGY RECOVERY DEFROST OPERATION.

This screen only appears if modulating wheel frost control is equipped. When the defrost control ramp is in manual mode, use the arrow buttons to vary the defrost output.

0% = Maximum Wheel Speed

100% = Minimum Wheel Speed

Control Variables

- ☒ Advanced
- ☒ Network Settings

The Network Settings Menus allows the user to view and modify network settings. The **service password (9998)** is required to make changes.

```

pCO Board Address
Enable DHCP: ☐
IP: 192.168. 1.101
Mask: 255.255.255. 0
GW: 192.168. 1. 1
DNS: 0. 0. 0. 0
Save Changes: ☐
  
```

THIS SCREEN ALLOWS THE USER TO VIEW AND ADJUST CONTROLLER TCP/IP SETTINGS.

This screen will appear with or without a network protocol provided with the unit.

This screen allows the user to configure the IP setting for BMS and/or when the Web User Interface will be utilized. The controller may have a DHCP server-assigned address or a manually-assigned static IP address. Factory settings are shown in the screen to the left.

To change pCO Board Address parameters:


1. Power on the controller and allow several minutes to initialize.
2. Go to Network Settings menu and view pCO Board Address screen.
3. Move cursor to desired parameter by pressing the enter button. Press up and down arrows to adjust the parameter. Press enter to accept adjusted value.
4. Once desired parameters have been entered, enable the 'Save Settings' option and press the enter button.
5. Reboot the controller by cycling power to the unit. Allow several minutes for the controller to initialize.
6. View pCO Board Address Config. If changed values did not save, contact the factory.

```

BACnet IP Config
Device: 0077077
Port: 0047808
  
```

THIS SCREEN ALLOWS THE USER TO VIEW AND ADJUST CONTROLLER BACNET IP CONFIG SETTINGS.

This screen will appear if the unit is set for BACnet IP and allows the user to set the device and port settings.

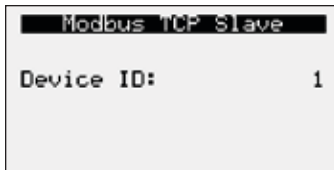

THIS SCREEN ALLOWS THE USER TO VIEW AND ADJUST CONTROLLER MODBUS TCP SLAVE.

This screen will appear if the unit is set for Modbus TCP and allows the user to set device ID number.




THIS SCREEN ALLOWS THE USER TO ADJUST BACNET AND MSTP PARAMETERS.

This screen only appears if the selected BMS protocol is set to BACnet MSTP. Factory settings are shown in the screen to the left.

To change BACnet MSTP parameters:

1. Power on the controller and allow several minutes to initialize.
2. Go to Network Settings menu and view BACnet MSTP Config screen.
3. Move cursor to desired parameter by pressing the enter button. Press up and down arrows to adjust the parameter. Press enter to accept adjusted value.
4. Once desired parameters have been entered, enable the 'Save Settings' option and press the enter button.
5. Reboot the controller by cycling power to the unit. Allow several minutes for the controller to initialize.
6. View BACnet MSTP Config. If changed values did not save, contact the factory.

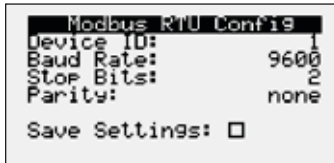


THIS SCREEN ALLOWS THE USER TO ADJUST MODBUS PARAMETERS.

This screen only appears if the selected BMS protocol is set to Modbus. Factory settings are shown in the screen to the left.

To change Modbus RTU parameters:

1. Power on the controller and allow several minutes to initialize.
2. Go to Network Settings menu and view Modbus RTU Config screen.
3. Move cursor to desired parameter by pressing the enter button. Press up and down arrows to adjust the parameter. Press enter to accept adjusted value.
4. Once desired parameters have been entered, enable the 'Save Settings' option and press the enter button.
5. Reboot the controller by cycling power to the unit. Allow several minutes for the controller to initialize.
6. View Modbus RTU Config. If changed values did not save, contact the factory.

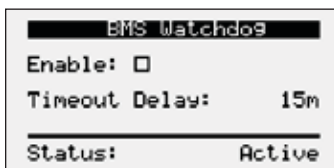


THIS SCREEN ALLOWS THE USER TO ENABLE THE BMS WATCHDOG FUNCTION.

The BMS watchdog function verifies BMS connectivity. The watchdog is required for the BMS to take the place of a hardwired sensor. The BMS toggles the watchdog variable from true to false within the timeout delay. If the timer expires, the controller falls back to hardwired sensors until the BMS connection can be established. At this time, a BMS watchdog alarm activates.

The following variables may be used by the BMS in place of hardwired sensors:

- Outside_RH_from_BMS
- Outside_Temp_from_BMS
- Return_RH_from_BMS
- Return_Temp_from_BMS
- Space_1_CO2_from_BMS
- Return_CO2_from_BMS
- Space_RH_from_BMS
- Space_Static_from_BMS
- Space_Temp_from_BMS

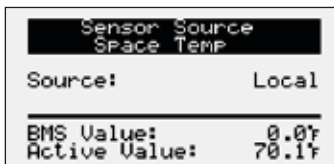

SENSOR SOURCE SPACE TEMP

The sensor source can be changed to source by BMS through the controller or by a dedicated BMS point. Reference Points List above and in the Appendix for more detailed point information. Screen to the left is an example of the sensor source type. Source can be set for local or BMS at this screen.



Control Variables

- ↳ Advanced
- ↳ Backup/Restore

The Backup/Restore Menu allows the user to create a backup file of setpoints and configuration variables on a USB drive or in the controller's internal memory.

Connecting to USB Drives

The controller has built-in USB ports for connecting to USB drives. The USB drives can be used for backing up all settings and reported conditions such as alarm history and current values. This creates a file named User_Backup.txt.

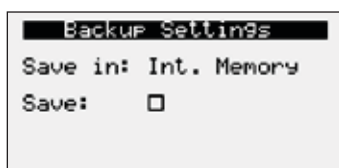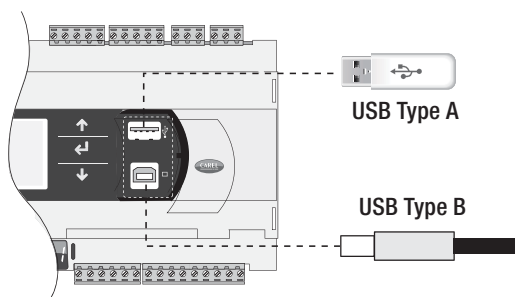**CREATING A BACKUP FILE**

Important:

- At first startup or commissioning, or prior to communicating with Technical Support about performance issues, we recommend creating a backup file for each controller.
- Name each file with the unit sales order–line number found on the silver nameplate attached to the electrical access door.
- Also consider creating a backup file whenever significant program changes are made.

To create a system backup file using the handheld or virtual keypad/display buttons:

1. Go to the Main Menu/Ctrl Variables/Advanced/Login screen. Press the Enter and Up or Down arrow buttons to enter the service password, which is 9998.
2. Go to the Main Menu/Ctrl Variables/Advanced/Backup/Restore screen.
3. Press the Up or Down arrow buttons to navigate to the Backup Settings screen.
4. Press the Enter and Up or Down arrow buttons to select the backup location (internal memory or USB). If creating a backup to a USB drive, insert a USB drive into the main controller.
5. Press Enter to highlight and then the Up or Down arrow buttons to fill the Save checkbox. This action creates the backup file.


```
USB Restore
Unit must be disabled
prior to restoring.
Unit: Enabled
Enable Restore: ☐
```

RESTORING FROM A BACKUP FILE

From USB

1. Place the restore file in the root directory of a USB drive. (Do not place the file within a folder on the USB drive.) The file must be named: User_Backup.txt
2. Insert the USB drive into the controller's USB port.
3. Go to the Main Menu/Unit Enable screen. Press the Enter and Up or Down arrow buttons to disable the unit.
4. Go to the Main Menu/Ctrl Variables/Advanced/Login screen. Press the Enter and Up or Down arrow buttons to enter the service password (9998).
5. Go to the Main Menu/Ctrl Variables/Advanced/Backup/Restore screen.
6. Press the Up or Down arrow buttons to navigate to the USB Restore screen.
7. Press Enter to highlight and then the Up or Down arrow buttons to fill the Restore checkbox. This action restores the backup file. If there is an error during the process, the specific error is displayed on this screen.
8. Cycle power to the controller.

From internal memory

1. Go to the Main Menu/Unit Enable screen. Press the Enter and Up or Down arrow buttons to disable the unit.
2. Go to the Main Menu/Ctrl Variables/Advanced/Login screen. Press the Enter and Up or Down arrow buttons to enter the service password, which is 9998.
3. Go to the Main Menu/Ctrl Variables/Advanced/Backup/Restore screen.
4. Press the Up or Down arrow buttons to navigate to the Internal Restore screen. This screen is only available when a backup file exists in internal memory.
5. Press Enter to highlight and then the Up or Down arrow buttons to fill the Restore checkbox. This action restores the backup file. If there is an error during the process, the specific error is displayed on this screen.
6. Cycle power to the controller.

Menu

Control Variables

- ↳ Advanced
- ↳ I/O Configuration

```
I/O Configuration
IO Type: Analog Input
Supply Air Temp
Ch: M U4 Type: NTC
```

Value: 71.6°F

The **IO Configuration Menu** allows the user to view and modify controller input and output points.

THIS SCREEN ALLOWS THE USER TO VIEW AND EDIT I/O POINTS.

This screen is read only and will require the factory password to make changes. Screen to the left is an example of an analog input configuration screen. Similar screens appear for remaining I/O when selected.

To monitor individual I/O points:

1. Press the enter button to highlight the I/O type.
2. Press the up and down arrows to change the IO type.
3. Press the enter button to highlight the controller channel.
4. Press the up and down arrows to change the channel.

IO Conf Options

```
Editable: ☐
Scroll by
All Configured: ☒
```

THIS SCREEN ALLOWS THE USER TO ENABLE I/O CONFIGURATION EDITS.

Changes to the IO configuration requires the factory login password. Consult factory for IO configuration changes.

ADJUSTMENT OF I/O CONFIGURATION MUST ONLY BE DONE UNDER FACTORY GUIDANCE! IMPROPER ADJUSTMENT MAY RESULT IN SYSTEM DAMAGE!

Control Variables

- ↳ Advanced
- ↳ Unit Configuration

```
Unit Configuration
Supply Fan Control
Type: Constant Volume
K Factor: 0.0
```

The **Unit Configuration** menus allows the user to view unit configuration provided from factory. Configuration menus listed below can be altered with the factory password. Consult factory for unit configuration changes!

THIS SCREEN ALLOWS THE USER TO VIEW AND CHANGE THE EXHAUST FAN CONTROL TYPE.

Reference control variables for possible exhaust fan control methods.

Unit Configuration Occupied Dehum Call

```
Enabled when:
Indoor RH
```

THIS SCREEN ALLOWS THE USER TO VIEW AND CHANGE THE UNOCCUPIED DEHUMIDIFICATION CALL.

Reference control variables for possible unoccupied dehumidification call methods.

Unit Configuration Unocc Unit Operation

```
Mode:
Night Setback Cycle
```

THIS SCREEN ALLOWS THE USER TO VIEW AND CHANGE THE UNOCCUPIED UNIT OPERATION.

Possible unoccupied unit operation methods include:

- Unit Off
- Night Setback Cycle*
- Recirculation with Unoccupied Setpoints*
- Normal Operation with Unoccupied Setpoints

Note: An asterisk indicates method is only available if the unit is equipped with an unoccupied recirculation damper.

Unit Configuration


```
Morning Warm Up: ☐
Morning Cool Down: ☐
Max duration: 30m
```

THIS SCREEN ALLOWS THE USER TO ENABLE MORNING WARM UP AND COOL DOWN.

The user can enable morning warm up, morning cool down, and set the duration for the sequence.


Alarms

The **Alarms** menu allows the user to view active alarms, reset active alarm (if possible), and alarm history.

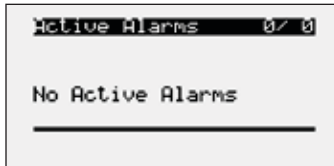
**ACTIVE ALARMS**

If an alarm occurs, the button will glow red on the controller and the remote display (if installed).


To view alarm, press the Alarm button once. This will display the most recent alarm. If the alarm cannot be cleared, the cause of the alarm has not been fixed. Press the up and down buttons to view any additional occurring alarms.

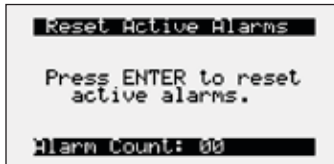**RESET ACTIVE ALARMS**

This screen allows the user to clear active alarms.

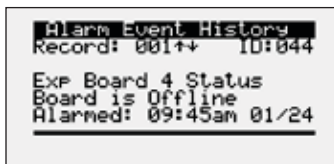**ALARM EVENT HISTORY**

This screen allows the user view recent alarms. To view all saved alarms, press the “down” button to enter the data logger.

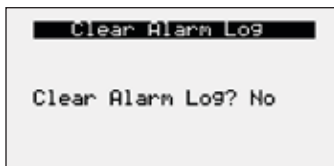**CLEAR ALARM LOG**

This screen allows the user to clear all alarms in alarm log history.

IG Furnace Alarm (AL) Descriptions

IG no flame 3 try AL	Indicates a furnace failure to light or properly sense flame after 3 trials.	Alarm only
IG combustion fan high pressure switch failure	Indicates a call for high speed combustion fan but high pressure switch did not close.	Alarm only
IG furnace ignition control	Indicates an alarm from the ignition controller.	Alarm only
Pressure switch closed with combustion fan off	Indicates low pressure switch was closed with no call for combustion fan.	Alarm only
Combustion fan not proved	Indicates a call for low speed combustion fan but low pressure switch did not close.	Alarm only
IG furnace max retry	Indicates that the max number of retries was reached.	Alarm and Furnace lockout
IG High Temp AL	Indicates that power was lost from the High Temp Limit Sensor. Check for high limit trip.	Alarm only
IG offline	Indicates communication with furnace control has failed.	Alarm only
IG Lg Man No Flame AL	No flame after 3 trials for ignition on the large manifold.	Alarm only

Appendix: Remote Display (pGD1)

The pGD1 is an optional remote display for use with manufacturer's microprocessor controllers. The remote display allows for remote monitoring and adjustment of parameters of the unit mounted controller. The remote display allows identical access to menus and screens as the unit mounted controller display.



Specifications


Carel Model	PGD1000W00
Power Supply	Power supplied from unit controller through RJ25 cable
Max distance from unit controller	150 feet
Required Cable	6P6C RJ25/RJ12 Cable (straight)
Operating Conditions	-4°F to 140°F, 90%RH (non-condensing)
Display Type	Backlit LED with lighted buttons

Installation


The remote display connects to the unit mounted controller through a six-wire RJ25 or RJ12 telephone cable (straight). When ordered from the factory, a 10 ft. cable is provided with the remote display. The display and cable can be used to assist with start-up and maintenance.

Connecting Cable

If mounted remotely, the factory cable can either be extended or replaced with a longer cable to obtain the necessary distance. The resulting cable connections should be a "straight through cable," where pins on one end correspond identically to the pins on the opposite end. If making your own cable, use the same pin-out for each end.

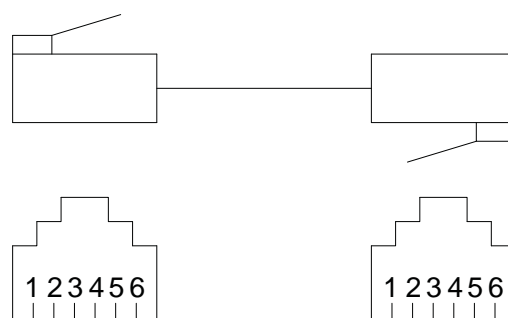

NTC Temperature Sensor Chart

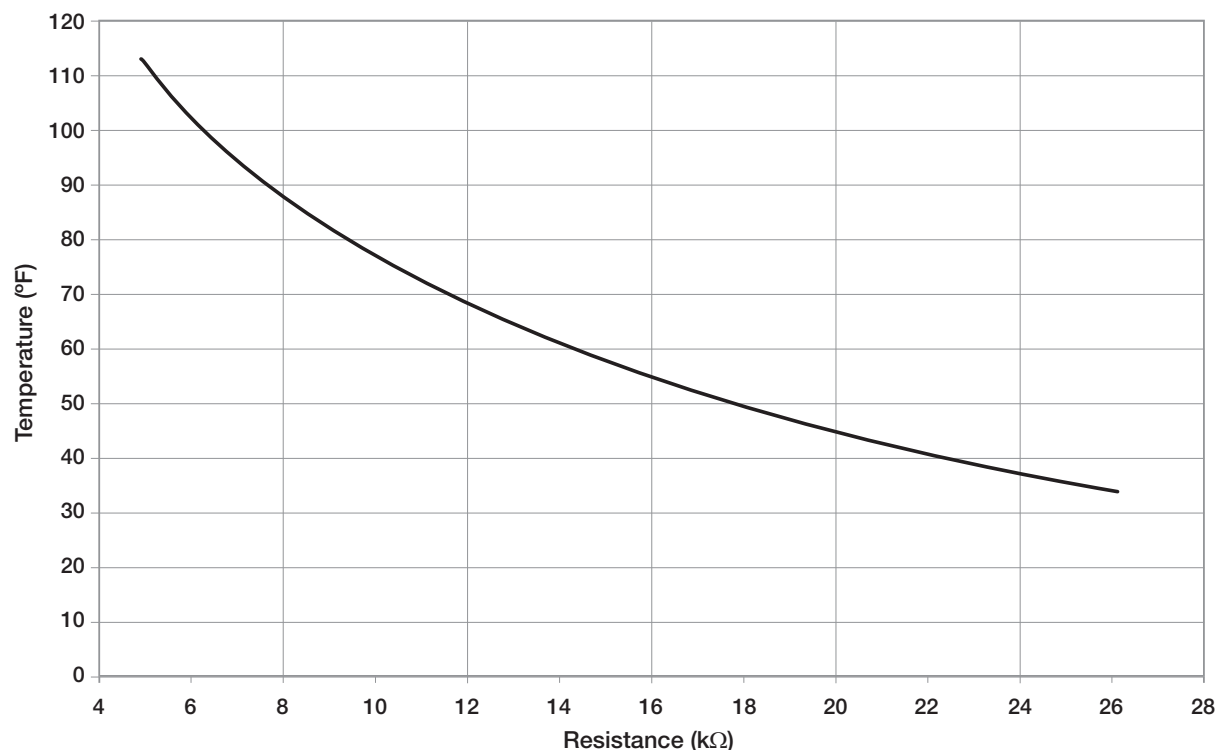


Appendix: I/O Expansion Board (c.pCOe) Quick Start

The expansion board is an I/O module that can be used to monitor additional statuses or provide commands from large board controller. It allows the user to view and control:






- 6 Universal Inputs (Digital Input*, NTC, 0/1VDC, 0/10VDC, 0/20mA, 4/20mA, 0/5VDC)
*Only dry to ground contacts can be utilized for digital inputs. Applying voltage will result in damage to the I/O expansion board.
- 4 Analog Outputs (VDC)
- 6 Digital Outputs

The inputs and outputs can be monitored and controlled by the Building Management System. Reference Points List for detailed point information.

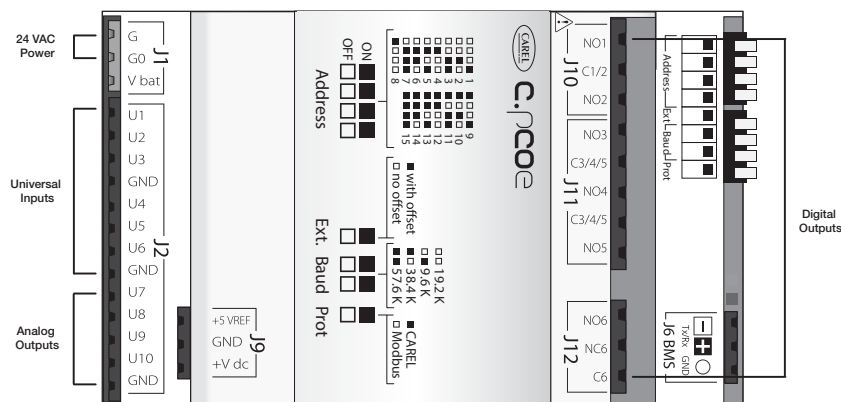

Setup

In order for the controller to communicate with the c.pCOe, several parameters must be adjusted. If you have a c.pCOe installed from the factory, the controller is already set up for communication with the main controller. The factory password is required for expansion board and I/O configuration updates. Consult factory for I/O configuration changes.

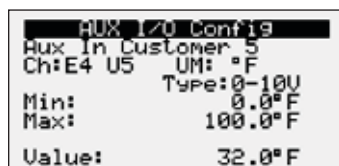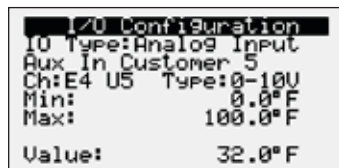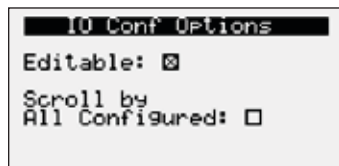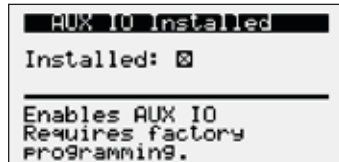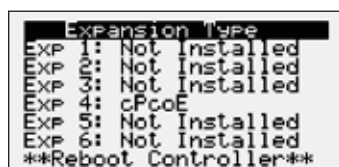

Enabling the pCOe in the Main Controller. - To enable the c.pCOe expansion I/O module, go to Ctrl Variables/Advanced/Unit Config. User will have to enter the Factory Password to make any edits at this point. Consult factory for factory password and configuring the expansion board. The expansion board must be enabled to configure spare I/O points. Once enabled, the user must reboot the controller. See screens to the left for expansion board enable points.

Configuring the I/O Type - In order to edit and configure the I/O configuration of the unit, go to Ctrl Variables/Advanced/I/O Configuration. The user must enable the Editable option for configuring I/O points. If configuring a new I/O point, 'Scroll by All Configured' must be deselected to view all I/O options.

Change or Update the I/O Point - Once the editable option is selected, the user must scroll to the I/O Configuration Menu. At this menu the desired I/O type can be selected. Once selected the user can configure the desired channel at the expansion board. The channel will have an 'E' designation for expansion board. Aux In Customer 1-6, Aux Analog Out 1-4, and Aux Digital Out 1-6 will be allocated for the I/O expansion board. See example to the left.

Viewing c.pCOe Auxiliary Values - Once the expansion board I/O is configured, the user can view and/or change the I/O type by navigating to Ctrl Variables/Aux I/O Config.

Appendix: Room Thermostat Quick Start



The room thermostat gives users the ability to view the room temperature and relative humidity (optional) and control the active room set points from the adjustable display. The room thermostat also has the ability to send the unit into temporary occupied mode. It also provides the functionality to average up to 4 temperature readings through the microprocessor. The room thermostat is shipped loose with installation by others and is a Modbus connected device.

Room thermostat functions:

- Temporary occupancy override control
- Temperature and relative humidity monitoring
- Temperature and relative humidity set point adjustability
- Status icon on LCD display with push buttons
- Optional temperature monitoring up to 4 sensors


Display

If more than one room thermostat is provided for averaging, only one room thermostat will be provided with a display and push buttons for adjustment.

Adjusting SET POINT - The default display will show the current temperature value for the room. Use the scroll button to index through additional sensor parameters. Parameters with the "SET POINT" icon displayed above the temperature display are adjustable. Use the Up/Down buttons to adjust the set point, and use the scroll button to view the next parameter or return to the normal display mode.

Up/Down Button Function - The Up/Down buttons are used to adjust editable parameters including the temperature and humidity set point.


Override Button Function - The display shows a person in the lower left corner of the display at all times. If the person is solid, the unit is operating in occupied mode. If it is an outline of the person, the unit is in unoccupied mode. Pushing the Override button when the unit is in unoccupied mode will allow a temporary override sequence to Occupied mode for a period of 1 to 3 hours (adjustable at the unit microprocessor).

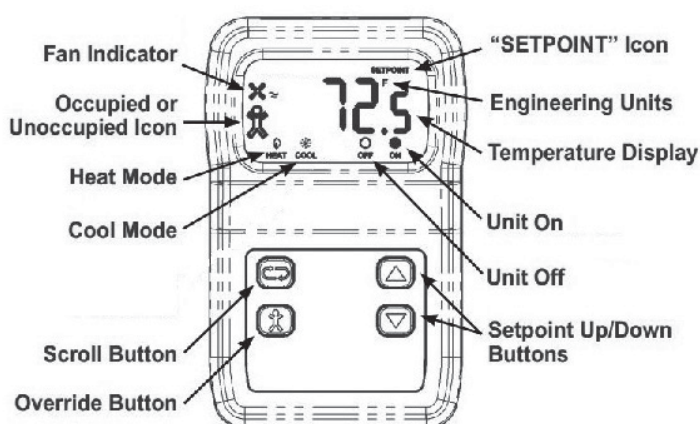

Initial Setup and Communication Configuration

The room thermostat is a Modbus connected device. There can be up to three additional Modbus temperature sensors added for room temperature averaging. The sensors must all be connected in a daisy chain configuration.

The microprocessor controller will be pre-configured for one room thermostat. If room temperature averaging is desired, additional field setup will be required both in the controller and on the Modbus room sensors:

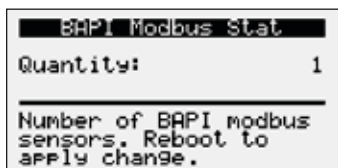


- Each room sensor must have the DIP switches adjusted on the back of the sensor to the corresponding switches. Reference Room Thermostat Modbus Address chart on the following page for DIP switches settings.
- Once the address is set and the wires are connected the "Status" LED should be a steady green and the "Network" LED should be a quick blinking amber/green color.
- In the Controller, enter the Ctrl Variables Menu/Temperature and scroll down in the Temperature Menu to select BAPI Modbus Stat. Choose the number of room sensor being used (1-4).


Appendix: Room Thermostat Quick Start

Status LED

Green indicates that the unit is operating properly.
Red indicates that there is a problem with the unit.

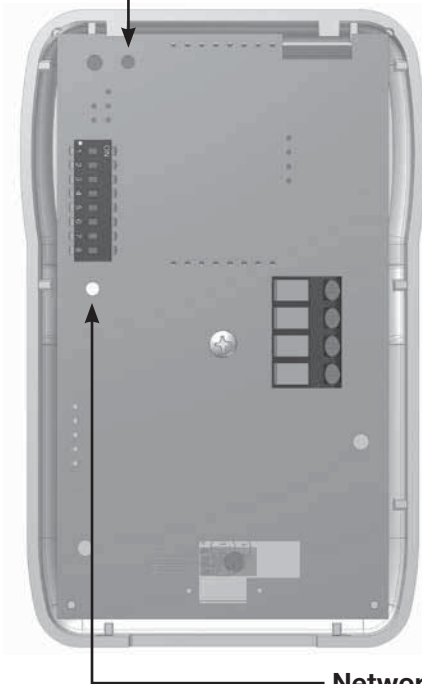

Terminal	Description
GND	Power Supply Ground (common to the controller)
Net B	RS485 network connection (Data -)
Net A	RS485 network connection (Data +)
Power	Power supply hot

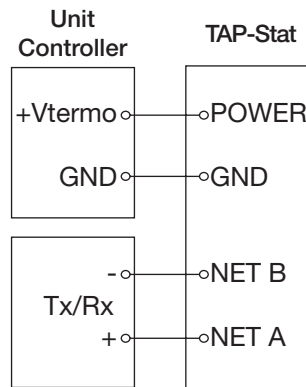

Network LED

Flashing Red Slowly indicates that there has been no communications for 60 seconds.

Flashing Green Slowly indicates that there have been normal communications within the last 60 seconds.

Flashing Green Slowly with Quick Red Flashes; the quick red flashes indicate active communications.

Room Thermostat Modbus Address

	T-Stat 1 (Display)	T-Stat 2	T-Stat 3	T-Stat 4
Address in Microprocessor	10	11	12	13
Dip Switch Set on Stat	Sw 2 + Sw 8	Sw 1 + Sw 2 + Sw 8	Sw 4 + Sw 8	Sw 1 + Sw 4


Baud Rate Setting

In order for the room thermostat to communicate with the microprocessor, the correct baud rate must be set in the room thermostat. To set the baud rate:

- The “PROG” DIP switch on the back of the room thermostat must be flipped to the right side.
- Use the Setpoint Down button to display P11 on the room thermostat.
- Push the Scroll button and use the Setpoint Up/Down buttons to adjust the baud rate to 192.
- Once 192 is displayed, push the Scroll button again to save the setting. Once the setting is saved, P11 should appear on the display.
- Flip the “PROG” DIP switch on the back of the room thermostat back to the left. The room thermostat should communicate and be set back to normal mode.

Occupancy Override Time Adjustment

If the occupancy override time needs to be adjusted:

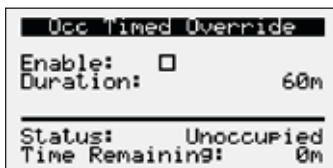

- If the occupancy override is enabled from the room thermostat or the unit microprocessor, it will override for the period of time set on this menu screen.
- To adjust the temperature override time, enter the following menu options at the controller, Cntrl Variables/Occupancy. Scroll down at the Occupancy Menu and select Occ Timed Override. This menu will allow the user to enable occupancy override from the controller and set override duration.

Appendix: GreenTrol® Airflow Monitoring Quick Start

Airflow Status	
Exh Fan:	0
OAD:	0

The GreenTrol® airflow monitoring station measures airflow using advanced thermal dispersion technology. An integral LCD display provides a local indication of airflow measurement and device configuration. The airflow monitor also features Modbus communication allowing the main unit microprocessor to monitor the airflow as well. The GreenTrol also accepts up to two airflow probes for averaging.

GreenTrol Airflow Monitor functions:

- LCD readout of measured airflow
- Dual airflow probe averaging
- Modbus connectivity




Display and Navigation

The LCD screen will by default show the current airflow that is being measured. To enter the menu to set up the monitoring station the user must remove the front cover of the GreenTrol to uncover the navigation buttons. Press and hold the UP and DOWN buttons at the same time for 3 seconds to enter the menu.

Enter Button Function - The ENTER button allows the user to go into the selected menu or function, as well as save the selected value.

Up/Down Button Function - The Up/Down buttons are used to navigate the menu and to change values in the menu.

Esc Button Function - The ESC button allows the user to exit the current menu or function.

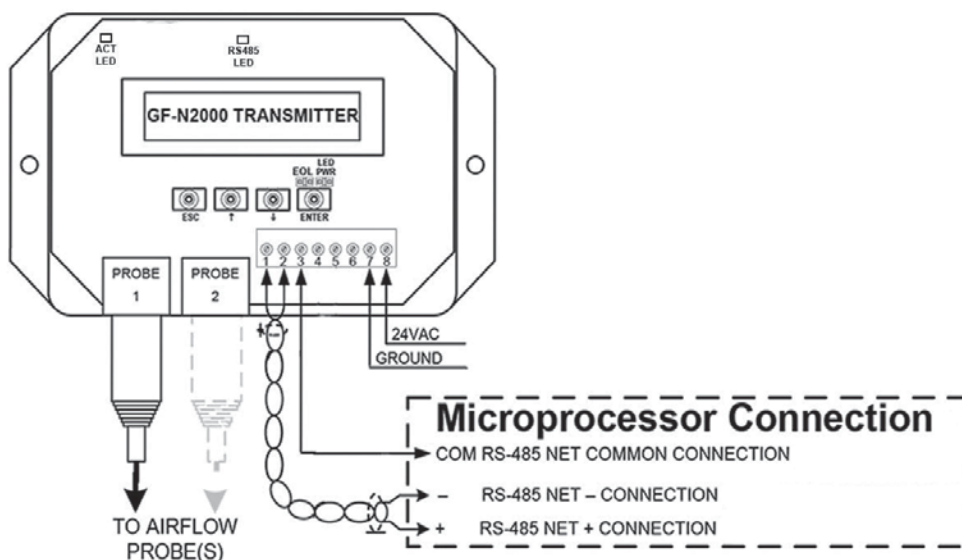

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Analog Inputs - Read Only										
Cold_Coil_1_Temp_Analog_Input	Cold Coil 1 Temperature			25	AI	ReadCOV_NoWrite	0.1	30243	Input	2
CL_Coil_Spt_Temp	Controls Lite Cooling Coil Setpoint Temperature value			31	AI	ReadCOV_NoWrite	0.1	30255	Input	2
CL_Supply_Spt_Temp	Controls Lite Supply Setpoint Temperature value			32	AI	ReadCOV_NoWrite	0.1	30257	Input	2
Outside_Air_Temp_Analog_Input	Outside Air Temperature			37	AI	ReadCOV_NoWrite	0.1	30267	Input	2
Space_Temp_Analog_Input	Space Temperature			44	AI	ReadCOV_NoWrite	0.1	30281	Input	2
Supply_Temp_Analog_Input	Supply Temperature			45	AI	ReadCOV_NoWrite	0.1	30283	Input	2
Outside_RH_Analog_Input	Outside % Relative Humidity			86	AI	ReadCOV_NoWrite	0.1	30349	Input	2
Space_RH_Analog_Input	Space % Relative Humidity			89	AI	ReadCOV_NoWrite	0.1	30355	Input	2
Space_Static_Pressure_Analog_Input	Space Static Pressure			94	AI	ReadCOV_NoWrite	0.01	30365	Input	2
Supply_Duct_Static_Pressure_Analog_Input	Supply Duct Static Pressure			95	AI	ReadCOV_NoWrite	0.01	30367	Input	2
Space_CO2_1_Analog_Input	Space 1 CO2 ppm			116	AI	ReadCOV_NoWrite	10	30401	Input	2
Circuit_A_Discharge_Pressure_Analog_Input	Circuit A Discharge Pressure			119	AI	ReadCOV_NoWrite	0.1	30407	Input	2
Circuit_B_Discharge_Pressure_Analog_Input	Circuit B Discharge Pressure			121	AI	ReadCOV_NoWrite	1	30411	Input	2
Aux_In_Customer_1	Customer defined auxiliary input			640	AI	ReadCOV_NoWrite	0.1	30639	Input	2
Aux_In_Customer_2	Customer defined auxiliary input			642	AI	ReadCOV_NoWrite	0.1	30641	Input	2
Aux_In_Customer_3	Customer defined auxiliary input			644	AI	ReadCOV_NoWrite	0.1	30643	Input	2
Aux_In_Customer_4	Customer defined auxiliary input			646	AI	ReadCOV_NoWrite	0.1	30645	Input	2
Aux_In_Customer_5	Customer defined auxiliary input			648	AI	ReadCOV_NoWrite	0.1	30647	Input	2
Aux_In_Customer_6	Customer defined auxiliary input			650	AI	ReadCOV_NoWrite	0.1	30649	Input	2

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Analog Values - Read/Write - Commandable										
Temperature_Setpoint	Main Temperature Set point. Supply, Space, or Return target temperature			1	AV	ReadCOV_Commandable	0	40001	Holding	2
Temperature_Heat_Cool_Deadband	Heat/Cool Spt Deadband when Room or Return control is active. Clg Spt = Deadband /2 + Temp Spt. Htg Spt = Deadband /2 - Temp Spt.			2	AV	ReadCOV_Commandable	0	40003	Holding	2
Cooling_Coil_Setpoint_Min	Cooling Coil Leaving Air Setpoint			3	AV	ReadCOV_Commandable	0	40005	Holding	2
Dehumidification_Setpoint	Dehumidification Setpoint. %RH for Space or Return control.			5	AV	ReadCOV_Commandable	0	40009	Holding	2
Outside_Dewpoint_Setpoint	Outside Dewpoint Dehumidification Trigger Setpoint			6	AV	ReadCOV_Commandable	0	40011	Holding	2
Indoor_Dewpoint_Setpoint	Indoor Dewpoint Dehumidification Trigger Setpoint			7	AV	ReadCOV_Commandable	0	40013	Holding	2
Unocc_Indoor_Dewpoint_Setpoint	Unoccupied Indoor Dewpoint Dehumidification Trigger Setpoint			9	AV	ReadCOV_Commandable	0	40017	Holding	2
Unoccupied_Cooling_Setpoint	Unoccupied Cooling Setpoint			10	AV	ReadCOV_Commandable	0	40019	Holding	2
Unoccupied_Dehumidification_Setpoint	Unoccupied Dehumidification %RH Setpoint			11	AV	ReadCOV_Commandable	0	40021	Holding	2
Unoccupied_Heating_Setpoint	Unoccupied Heating Setpoint			12	AV	ReadCOV_Commandable	0	40023	Holding	2
Economizer_Temp_Enable_Setpoint	Economizer Ambient Temp Enable Setpoint. Allow Econ when OAT<Spt			16	AV	ReadCOV_Commandable	0	40031	Holding	2
Economizer_Enthalpy_Enable_Setpoint	Economizer Enthalpy Enable Setpoint. Allow Econ when OA Enthalpy<Spt			17	AV	ReadCOV_Commandable	0	40033	Holding	2
Outside_RH_from_BMS	Outside RH from BMS. Used when source selection is set to BMS.			21	AV	ReadCOV_Commandable	0.1	40041	Holding	2
Outside_Temp_from_BMS	Outside Temp from BMS. Used when source selection is set to BMS.			22	AV	ReadCOV_Commandable	0.1	40043	Holding	2
Space_1_CO2_from_BMS	Space 1 CO2 from BMS. Used when source selection is set to BMS.			25	AV	ReadCOV_Commandable	0.1	40049	Holding	2
Space_RH_from_BMS	Space RH from BMS. Used when source selection is set to BMS.			28	AV	ReadCOV_Commandable	0.1	40055	Holding	2
Space_Static_from_BMS	Space Static from BMS. Used when source selection is set to BMS.			29	AV	ReadCOV_Commandable	0.1	40057	Holding	2
Space_Temp_from_BMS	Space Temp from BMS. Used when source selection is set to BMS.			30	AV	ReadCOV_Commandable	0.1	40059	Holding	2
Cooling_Lockout_Setpoint	Cooling Ambient Lockout Setpoint			31	AV	ReadCOV_Commandable	0.1	40061	Holding	2
Heating_Lockout_Setpoint	Heating Ambient Lockout Setpoint			32	AV	ReadCOV_Commandable	0.1	40063	Holding	2
Space_Static_Pressure_Setpoint	Space Static Pressure Setpoint			37	AV	ReadCOV_Commandable	0.1	40073	Holding	2

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Supply_Duct_Static_Pressure_Setpoint	Supply Duct Static Pressure Setpoint			38	AV	ReadCOV_Commandable	0.1	40075	Holding	2
Space_CO2_Setpoint	Space CO2 Setpoint			39	AV	ReadCOV_Commandable	0.1	40077	Holding	2
SF_Control_Signal_BMS	BMS to control signal for supply fan speed			133	AV	ReadCOV_Commandable	0.1	40083	Holding	2
EF_Control_Signal_BMS	BMS to control signal for exhaust fan speed			134	AV	ReadCOV_Commandable	0.1	40085	Holding	2
OAD_Control_Signal_BMS	Allows the BMS to control OAD position. True = BMS. False = Local.			136	AV	ReadCOV_Commandable	0.1	40089	Holding	2
Outside_Air_Damper_Minimum_Setpoint	Outside Air Damper Minimum Setpoint			137	AV	ReadCOV_Commandable	1	40091	Holding	2
Aux_BMS_Analog_Output_1	BMS Commanded auxiliary analog output			138	AV	ReadCOV_Commandable	0.1	40093	Holding	2
Aux_BMS_Analog_Output_2	BMS Commanded auxiliary analog output			139	AV	ReadCOV_Commandable	0.1	40095	Holding	2
Aux_BMS_Analog_Output_3	BMS Commanded auxiliary analog output			140	AV	ReadCOV_Commandable	0.1	40097	Holding	2
Aux_BMS_Analog_Output_4	BMS Commanded auxiliary analog output			141	AV	ReadCOV_Commandable	0.1	40099	Holding	2

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Analog Values - Read Only										
Unit_Status_Mode	0: Off/Standby 1: Unoccupied Start 2: Occupied Start 5: Dampers Open 6: Fan Start Delay 7: Fans Starting 9: Heat/Cool Delay 10: System On 11: Soft Shutdown 12: System Disabled 13: Remote Off 14: Shutdown Alarm 19: Fans Only 20: Economizing 21: Cooling 22: Heating 23: Dehumidifying 25: HGRH Purging 26: Defrost Active 28: Cooling & Heating 29: Dehum w/Heat 30: Overrides Active 31: Expansion Offline 51: IO Test. Sys Disabled			40	AV	ReadCOV_NoWrite	0	30001	Input	2
Supply_Temperature_Calculated_Setpoint	Active Supply Temperature Setpoint			41	AV	ReadCOV_NoWrite	0.1	30003	Input	2
Cooling_1_Ramp_Capacity	Cooling Ramp 1 Status Value			43	AV	ReadCOV_NoWrite	1	30007	Input	2
Defrost_Ramp	Defrost Ramp			47	AV	ReadCOV_NoWrite	1	30015	Input	2
Economizer_Ramp	Economizer Ramp			48	AV	ReadCOV_NoWrite	1	30017	Input	2
Exhaust_Fan_Space_Static_Pressure_Ramp	Exhaust Fan Space Static Pressure Ramp			49	AV	ReadCOV_NoWrite	1	30019	Input	2
Exhaust_Fan_Supply_Tracking_Ramp	Exhaust Fan Supply Tracking Ramp			50	AV	ReadCOV_NoWrite	1	30021	Input	2
Head_Pressure_Control_Ramp_1_Ramp	Head Pressure Control Ramp 1			51	AV	ReadCOV_NoWrite	1	30023	Input	2
Head_Pressure_Control_Ramp_2_Ramp	Head Pressure Control Ramp 2			52	AV	ReadCOV_NoWrite	1	30025	Input	2
Heating_Ramp	Heating Ramp			60	AV	ReadCOV_NoWrite	1	30041	Input	2
Hot_Gas_Reheat_Ramp	Hot Gas Reheat Ramp			61	AV	ReadCOV_NoWrite	1	30043	Input	2
Space_CO2_Control_Ramp	Space CO2 Control Ramp			71	AV	ReadCOV_NoWrite	1	30063	Input	2
Supply_Duct_Static_Pressure_Ramp	Supply Duct Static Pressure Ramp			72	AV	ReadCOV_NoWrite	1	30065	Input	2
Supply_Fan_Space_Static_Pressure_Ramp	Supply Fan Space Static Pressure Ramp			74	AV	ReadCOV_NoWrite	1	30069	Input	2
Winter_Ramp_Output	Winter Ramp Output			75	AV	ReadCOV_NoWrite	1	30071	Input	2
Outside_Dewpoint	Outside Dewpoint			82	AV	ReadCOV_NoWrite	0.1	30085	Input	2
Outside_Enthalpy	Outside Enthalpy			83	AV	ReadCOV_NoWrite	0.1	30087	Input	2
Space_Dewpoint	Space Dewpoint			88	AV	ReadCOV_NoWrite	0.1	30097	Input	2
Space_Enthalpy	Space Enthalpy			89	AV	ReadCOV_NoWrite	0.1	30099	Input	2
Total_Exhaust_Fan_CFM_BMS	Total Exhaust Fan CFM			107	AV	ReadCOV_NoWrite	10	30135	Input	2
OAD_CFM_BMS	OAD CFM			129	AV	ReadCOV_NoWrite	10	30173	Input	2
OAD_Space_Static_Pressure_Ramp	OAD Static Pressure Ramp			131	AV	ReadCOV_NoWrite	1	30177	Input	2

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Active_Temperature_Setpoint	Active Temperature Set point			132	AV	ReadCOV_NoWrite	0.1	30179	Input	2
Chilled_Water_1_Valve_Analog_Output	Chilled Water 1 Valve Analog Output			201	AV	ReadCOV_NoWrite	0.1	30473	Input	2
Condenser_1_Analog_Output	Condenser 1 Analog Output			205	AV	ReadCOV_NoWrite	0.1	30481	Input	2
Condenser_2_Analog_Output	Condenser 2 Analog Output			206	AV	ReadCOV_NoWrite	0.1	30483	Input	2
Electric_Heater_1_Analog_Output	Electric Heater 1 Analog Output			221	AV	ReadCOV_NoWrite	0.1	30513	Input	2
Energy_Recovery_Analog_Output	Energy Recovery Analog Output			229	AV	ReadCOV_NoWrite	0.1	30517	Input	2
Exhaust_Fan_Speed_Analog_Output	Exhaust Fan Speed Analog Output			231	AV	ReadCOV_NoWrite	0.1	30521	Input	2
Hot_Gas_Reheat_Analog_Output	Hot Gas Reheat Analog Output			235	AV	ReadCOV_NoWrite	0.1	30523	Input	2
Hot_Water_Valve_1_Analog_Output	Hot Water Valve 1 Analog Output			236	AV	ReadCOV_NoWrite	0.1	30525	Input	2
Mod_Gas_Furnace_1_Analog_Output	Mod Gas Furnace 1 Analog Output			242	AV	ReadCOV_NoWrite	0.1	30537	Input	2
Outside_Air_Damper_Analog_Output	Outside Air Damper Analog Output			250	AV	ReadCOV_NoWrite	0.1	30541	Input	2
Supply_Fan_Speed_Analog_Output	Supply Fan Speed Analog Output			264	AV	ReadCOV_NoWrite	0.1	30557	Input	2
Modulating_Compressor_Analog_Output_BMS	Modulating Compressor Analog Output - Valent BMS			285	AV	ReadCOV_NoWrite	0.1	30585	Input	2
Circuit_A_Sat_Discharge_Temperature	Circuit A Saturated Discharge Temperature			286	AV	ReadCOV_NoWrite	0.1	30587	Input	2
Circuit_B_Sat_Discharge_Temperature	Circuit B Saturated Discharge Temperature			287	AV	ReadCOV_NoWrite	0.1	30589	Input	2

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Binary Inputs - Read Only										
Exhaust_Fan_1_Status_Digital_Input	Exhaust Fan 1 Status	Active	Inactive	23	BI	ReadCOV_NoWrite	0	24	Discrete	
Occupancy_Digital_Input	Occupancy Digital Input Status	Active	Inactive	53	BI	ReadCOV_NoWrite	0	54	Discrete	
Outside_Filter_Alarm_Digital_Input	Outside Filter Alarm Digital Input Status	Active	Inactive	54	BI	ReadCOV_NoWrite	0	55	Discrete	
Shutdown_Alarm_Digital_Input	Shutdown Alarm Digital Input Status	Active	Inactive	75	BI	ReadCOV_NoWrite	0	76	Discrete	
Supply_Fan_1_Status_Digital_Input	Supply Fan 1 Status	Active	Inactive	78	BI	ReadCOV_NoWrite	0	79	Discrete	
Unit_Enable_Digital_Input	Remote Unit Enable Digital Input Status	Active	Inactive	82	BI	ReadCOV_NoWrite	0	83	Discrete	
Wheel_Status_Digital_Input	Heat Wheel Status	Active	Inactive	83	BI	ReadCOV_NoWrite	0	84	Discrete	
Binary Values - Read/Write - Commandable										
BMS_Watchdog	BMS Watchdog command. Used to determine comm status. Must heartbeat within the watchdog timeout delay to detect comm status.	Active	Inactive	1	BV	Read_Commandable	0	2	Coil	
System_Enable	Master system enable/disable point.	Enable	Disable	2	BV	Read_Commandable	0	3	Coil	
BMS_Occupancy_Command	Occupancy Command. True = Unoccupied. False = Occupied.	Unoccupy	Occupy	3	BV	Read_Commandable	0	4	Coil	
Reset_All_Alarms	Alarm Reset Command.	Reset	Normal	4	BV	Read_Commandable	0	5	Coil	
Outside_RH_Source_BMS	Outside RH Source Selection. True = BMS. False = Local.	BMS	Local	5	BV	Read_Commandable	0	6	Coil	
Outside_Temp_Source_BMS	Outside Temp Source Selection. True = BMS. False = Local.	BMS	Local	6	BV	Read_Commandable	0	7	Coil	
Space_1_CO2_Source_BMS	Space 1 CO2 Source Selection. True = BMS. False = Local.	BMS	Local	9	BV	Read_Commandable	0	10	Coil	
Space_RH_Source_BMS	Space RH Source Selection. True = BMS. False = Local.	BMS	Local	12	BV	Read_Commandable	0	13	Coil	
Space_Static_Source_BMS	Space Static Source Selection. True = BMS. False = Local.	BMS	Local	13	BV	Read_Commandable	0	14	Coil	
Space_Temp_Source_BMS	Space Temp Source Selection. True = BMS. False = Local.	BMS	Local	14	BV	Read_Commandable	0	15	Coil	
SF_Control_Source_BMS	Allows the BMS to control supply fan speed. True = BMS. False = Local.	BMS	Local	56	BV	Read_Commandable	0	19	Coil	
EF_Control_Source_BMS	Allows the BMS to control exhaust fan speed. True = BMS. False = Local.	BMS	Local	57	BV	Read_Commandable	0	20	Coil	
OAD_Control_Source_BMS	Allows the BMS to control OAD position. True = BMS. False = Local.	BMS	Local	59	BV	Read_Commandable	0	22	Coil	

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Binary Values - Read Only										
Occupied	Occupied Status.	Occupied	Unoccupied	16	BV	ReadCOV_NoWrite	0	10002	Discrete	
Unoccupied	Unoccupied Status.	Unoccupied	Occupied	17	BV	ReadCOV_NoWrite	0	10003	Discrete	
Unoccupied_Cooling_Call	Unoccupied Cooling Call Status	Active	Inactive	18	BV	ReadCOV_NoWrite	0	10004	Discrete	
Unoccupied_Dehumidification_Call	Unoccupied Dehumidification Call Status	Active	Inactive	19	BV	ReadCOV_NoWrite	0	10005	Discrete	
Unoccupied_Heating_Call	Unoccupied Heating Call Status	Active	Inactive	20	BV	ReadCOV_NoWrite	0	10006	Discrete	
Occupied_Start	Occupied Start Command Status	Active	Inactive	21	BV	ReadCOV_NoWrite	0	10007	Discrete	
Unoccupied_Start	Unoccupied Start Command Status	Active	Inactive	22	BV	ReadCOV_NoWrite	0	10008	Discrete	
Enable_Controls	Status to indicate startup is complete and the unit is ready.	Enabled	Disabled	23	BV	ReadCOV_NoWrite	0	10009	Discrete	
Global_Alarm	General alarm point. Optionally set to indicate any alarm is active, or a shutdown alarm is active.	Alarm	Normal	24	BV	ReadCOV_NoWrite	0	10010	Discrete	
System_Shutdown_Alarm	Shutdown alarm status. When true, System Enable will be set to false and the unit will remain off.	Shutdown	Normal	25	BV	ReadCOV_NoWrite	0	10011	Discrete	
Damper_Open	Indicates there is a open air path and the supply fan can run.	Open	Closed	26	BV	ReadCOV_NoWrite	0	10012	Discrete	
Cooling_is_On	Indicates that the unit is cooling.	Active	Inactive	27	BV	ReadCOV_NoWrite	0	10013	Discrete	
Economizer_is_On	Indicates that the unit is economizing.	Active	Inactive	28	BV	ReadCOV_NoWrite	0	10014	Discrete	
Heating_is_On	Indicates that the unit is heating.	Active	Inactive	29	BV	ReadCOV_NoWrite	0	10015	Discrete	
Dehumidification_Mode_Enabled	Indicates that the unit is dehumidifying.	Active	Inactive	31	BV	ReadCOV_NoWrite	0	10017	Discrete	
Manual_Override_Active	Indicates that manual overrides are active.	Override	Normal	32	BV	ReadCOV_NoWrite	0	10018	Discrete	
Cooling_Not_Locked_Out	Indicates that cooling is allowed.	Allowed	Locked_Out	33	BV	ReadCOV_NoWrite	0	10019	Discrete	
Heating_Not_Locked_Out	Indicates that heating is allowed.	Allowed	Locked_Out	34	BV	ReadCOV_NoWrite	0	10020	Discrete	
Preheat_Not_Locked_Out	Indicates that preheat is allowed.	Allowed	Locked_Out	36	BV	ReadCOV_NoWrite	0	10022	Discrete	
HGRH_Purging	Indicates that the hot gas reheat value is purging.	Active	Inactive	37	BV	ReadCOV_NoWrite	0	10023	Discrete	
Allow_Dampers	Startup sequence command to open dampers	Yes	No	43	BV	ReadCOV_NoWrite	0	10029	Discrete	
Allow_Exhaust_Fans	Startup sequence command to trigger exhaust fans to start	Yes	No	44	BV	ReadCOV_NoWrite	0	10030	Discrete	
Allow_Supply_Fans	Startup sequence command to trigger supply fans to start	Yes	No	48	BV	ReadCOV_NoWrite	0	10034	Discrete	
BMS_Watchdog_Active	Status of the BMS watchdog ping.	Active	Inactive	49	BV	ReadCOV_NoWrite	0	10035	Discrete	
BMS_Occupancy_Status	Status of the BMS occupancy command.	Occupied	Unoccupied	50	BV	ReadCOV_NoWrite	0	10036	Discrete	
Compressor_1_Enable_Digital_Output	Compressor 1 Enable Digital Output	Active	Inactive	111	BV	ReadCOV_NoWrite	0	10164	Discrete	
Compressor_2_Enable_Digital_Output	Compressor 2 Enable Digital Output	Active	Inactive	112	BV	ReadCOV_NoWrite	0	10165	Discrete	
Compressor_3_Enable_Digital_Output	Compressor 3 Enable Digital Output	Active	Inactive	113	BV	ReadCOV_NoWrite	0	10166	Discrete	

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Compressor_4_Enable_Digital_Output	Compressor 4 Enable Digital Output	Active	Inactive	114	BV	ReadCOV_NoWrite	0	10167	Discrete	
Condenser_Fan_1_Digital_Output	Condenser Fan 1 Digital Output	Active	Inactive	119	BV	ReadCOV_NoWrite	0	10172	Discrete	
Condenser_Fan_2_Digital_Output	Condenser Fan 2 Digital Output	Active	Inactive	120	BV	ReadCOV_NoWrite	0	10173	Discrete	
Condenser_Fan_3_Digital_Output	Condenser Fan 3 Digital Output	Active	Inactive	121	BV	ReadCOV_NoWrite	0	10174	Discrete	
Exhaust_Fan_1_Start_Stop_Digital_Output	Exhaust Fan 1 Start Stop Digital Output	Active	Inactive	127	BV	ReadCOV_NoWrite	0	10180	Discrete	
Furnace_1_Stage_1_Digital_Output	Furnace 1 Stage 1 Digital Output	Active	Inactive	131	BV	ReadCOV_NoWrite	0	10184	Discrete	
Furnace_2_Stage_1_Digital_Output	Furnace 2 Stage 1 Digital Output	Active	Inactive	133	BV	ReadCOV_NoWrite	0	10186	Discrete	
Heat_Wheel_Enable_Digital_Output	Heat Wheel Enable Digital Output	Active	Inactive	163	BV	ReadCOV_NoWrite	0	10208	Discrete	
PreHeat_Enable_Digital_Output	PreHeat Enable Digital Output	Active	Inactive	166	BV	ReadCOV_NoWrite	0	10211	Discrete	
Supply_Fan_1_Start_Stop_Digital_Output	Supply Fan 1 Start Stop Digital Output	Active	Inactive	186	BV	ReadCOV_NoWrite	0	10231	Discrete	
BMS_Offline_Alarm.Active	BMS Offline Alarm (0=Normal 1=Alarm)	Alarm	Normal	313	BV	ReadCOV_NoWrite	0	10264	Discrete	
Cold_Coil_1_Temperature_Sensor_Alarm.Active	Cold Coil 1 Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	387	BV	ReadCOV_NoWrite	0	10338	Discrete	
Comp_Maintenance_Alarm.Active	Comp Maintenance Alarm (0=Normal 1=Alarm)	Alarm	Normal	411	BV	ReadCOV_NoWrite	0	10362	Discrete	
Exhaust_Fan_1_Alarm.Active	Exhaust Fan 1 Alarm (0=Normal 1=Alarm)	Alarm	Normal	423	BV	ReadCOV_NoWrite	0	10373	Discrete	
Expansion_Board_1_Alarm.Active	Expansion Board 1 Alarm (0=Normal 1=Alarm)	Alarm	Normal	434	BV	ReadCOV_NoWrite	0	10384	Discrete	
Expansion_Board_2_Alarm.Active	Expansion Board 2 Alarm (0=Normal 1=Alarm)	Alarm	Normal	435	BV	ReadCOV_NoWrite	0	10385	Discrete	
Expansion_Board_3_Alarm.Active	Expansion Board 3 Alarm (0=Normal 1=Alarm)	Alarm	Normal	436	BV	ReadCOV_NoWrite	0	10386	Discrete	
Internal_Board_Temp_Alarm.Active	Internal Board Temp Alarm (0=Normal 1=Alarm)	Alarm	Normal	498	BV	ReadCOV_NoWrite	0	10448	Discrete	
Multi_Channel_Conf_Alarm.Active	Multi Channel Conf Alarm (0=Normal 1=Alarm)	Alarm	Normal	503	BV	ReadCOV_NoWrite	0	10453	Discrete	
Outside_Air_Temperature_Sensor_Alarm.Active	Outside Air Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	507	BV	ReadCOV_NoWrite	0	10457	Discrete	
Outside_Filter_Alarm.Active	Outside Filter Alarm (0=Normal 1=Alarm)	Alarm	Normal	508	BV	ReadCOV_NoWrite	0	10458	Discrete	
Outside_RH_Sensor_Alarm.Active	Outside RH Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	509	BV	ReadCOV_NoWrite	0	10459	Discrete	
Space_CO2_1_Analog_Input_Alarm.Active	Space CO2 1 Analog Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	535	BV	ReadCOV_NoWrite	0	10485	Discrete	
Space_High_Static_Alarm.Active	Space High Static Alarm (0=Normal 1=Alarm)	Alarm	Normal	537	BV	ReadCOV_NoWrite	0	10487	Discrete	
Space_RH_Sensor_Alarm.Active	Space RH Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	538	BV	ReadCOV_NoWrite	0	10488	Discrete	
Space_Setpoint_Slider_Alarm.Active	Space Setpoint Slider Alarm (0=Normal 1=Alarm)	Alarm	Normal	539	BV	ReadCOV_NoWrite	0	10489	Discrete	
Space_Static_Pressure_Analog_Input_Alarm.Active	Space Static Pressure Analog Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	540	BV	ReadCOV_NoWrite	0	10490	Discrete	
Space_Temperature_Sensor_Alarm.Active	Space Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	541	BV	ReadCOV_NoWrite	0	10491	Discrete	
Shutdown_Input_Alarm.Active	Shutdown Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	546	BV	ReadCOV_NoWrite	0	10496	Discrete	
Supply_Air_Temp_Low_Limit.Active	Supply Air Temp Low Limit Alarm (0=Normal 1=Alarm)	Alarm	Normal	551	BV	ReadCOV_NoWrite	0	10501	Discrete	

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Supply_Air_Temperature_Sensor_Alarm.Active	Supply Air Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	552	BV	ReadCOV_NoWrite	0	10502	Discrete	
Supply_Duct_Static_Pressure_Analog_Input_Alarm.Active	Supply Duct Static Pressure Analog Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	553	BV	ReadCOV_NoWrite	0	10503	Discrete	
Supply_Fan_1_Alarm.Active	Supply Fan 1 Alarm (0=Normal 1=Alarm)	Alarm	Normal	554	BV	ReadCOV_NoWrite	0	10504	Discrete	
Supply_High_Duct_Static_Alarm.Active	Supply High Duct Static Alarm (0=Normal 1=Alarm)	Alarm	Normal	563	BV	ReadCOV_NoWrite	0	10513	Discrete	
Supply_RH_Sensor_Alarm.Active	Supply RH Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	564	BV	ReadCOV_NoWrite	0	10514	Discrete	
Supply_Temp_High_Limit_Alarm.Active	Supply Temp High Limit Alarm (0=Normal 1=Alarm)	Alarm	Normal	565	BV	ReadCOV_NoWrite	0	10515	Discrete	
TMem_Error.Active	TMem Error Alarm (0=Normal 1=Alarm)	Alarm	Normal	567	BV	ReadCOV_NoWrite	0	10517	Discrete	
Wheel_Rotation_Alarm.Active	Wheel Rotation Alarm (0=Normal 1=Alarm)	Alarm	Normal	576	BV	ReadCOV_NoWrite	0	10526	Discrete	
AI_Batt_EVD_1.Active	EVD Battery Alarm (0=Normal 1=Alarm)	Alarm	Normal	589	BV	ReadCOV_NoWrite	0	10539	Discrete	
AI_ConfigErr_EVD_1.Active	EVD Configuration Alarm (0=Normal 1=Alarm)	Alarm	Normal	590	BV	ReadCOV_NoWrite	0	10540	Discrete	
AI_DscgHiP_COMP_1.Active	Compressor Envelope - High Discharge Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	591	BV	ReadCOV_NoWrite	0	10541	Discrete	
AI_DscgHiTemp_COMP_1.Active	Compressor Envelope - High Discharge Temperature Alarm (0=Normal 1=Alarm)	Alarm	Normal	592	BV	ReadCOV_NoWrite	0	10542	Discrete	
AI_DscgLowP_COMP_1.Active	EVD Low Discharge Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	593	BV	ReadCOV_NoWrite	0	10543	Discrete	
AI_EEPROM_EVD_1.Active	EVD EEPROM Alarm (0=Normal 1=Alarm)	Alarm	Normal	594	BV	ReadCOV_NoWrite	0	10544	Discrete	
AI_EEV_A_EVD_1.Active	ExV Motor Alarm - Valve 1 (0=Normal 1=Alarm)	Alarm	Normal	595	BV	ReadCOV_NoWrite	0	10545	Discrete	
AI_EmergencyClosing_EVD_1.Active	EVD Emergency Closing Alarm (0=Normal 1=Alarm)	Alarm	Normal	597	BV	ReadCOV_NoWrite	0	10547	Discrete	
AI_EVD_Offline_EVD_1.Active	EVD Offline Communication Alarm (0=Normal 1=Alarm)	Alarm	Normal	598	BV	ReadCOV_NoWrite	0	10548	Discrete	
AI_FW_CompatibErr_EVD_1.Active	EVD Firmware Compability Alarm (0=Normal 1=Alarm)	Alarm	Normal	599	BV	ReadCOV_NoWrite	0	10549	Discrete	
AI_HiCurr_COMP_1.Active	Compressor Envelope - High Current Alarm (0=Normal 1=Alarm)	Alarm	Normal	600	BV	ReadCOV_NoWrite	0	10550	Discrete	
AI_HiRatioP_COMP_1.Active	Compressor Envelope - High Pressure Ratio Alarm (0=Normal 1=Alarm)	Alarm	Normal	601	BV	ReadCOV_NoWrite	0	10551	Discrete	
AI_HiT_Cond_EVD_1.Active	AI_HiT_Cond_EVD_1 (0=Normal 1=Alarm)	Alarm	Normal	602	BV	ReadCOV_NoWrite	0	10552	Discrete	
AI_IncompleteClosing_EVD_1.Active	EVD Incomplete Closing Alarm (0=Normal 1=Alarm)	Alarm	Normal	603	BV	ReadCOV_NoWrite	0	10553	Discrete	
AI_LOP_A_EVD_1.Active	EVD Low Operating Pressure Alarm - Valve 1 (0=Normal 1=Alarm)	Alarm	Normal	604	BV	ReadCOV_NoWrite	0	10554	Discrete	
AI_Low_SH_A_EVD_1.Active	EVD Low SuperHeat Alarm - Valve 1 (0=Normal 1=Alarm)	Alarm	Normal	606	BV	ReadCOV_NoWrite	0	10556	Discrete	
AI_LowDeltaP_COMP_1.Active	Compressor Envelope - Low Pressure DeltaAlarm (0=Normal 1=Alarm)	Alarm	Normal	608	BV	ReadCOV_NoWrite	0	10558	Discrete	
AI_LowRatioP_COMP_1.Active	Compressor Envelope - Low Pressure Ratio Alarm (0=Normal 1=Alarm)	Alarm	Normal	609	BV	ReadCOV_NoWrite	0	10559	Discrete	
AI_LowSuct_A_EVD_1.Active	Low Suction Refrigerant Temperature - Valve 1 (0=Normal 1=Alarm)	Alarm	Normal	610	BV	ReadCOV_NoWrite	0	10560	Discrete	

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
AI_MOP_A_EVD_1.Active	EVD Max Operating Pressure Alarm - Valve 1 (0=Normal 1=Alarm)	Alarm	Normal	612	BV	ReadCOV_NoWrite	0	10562	Discrete	
AI_S1_EVD_1.Active	EVD-S1 Suction Pressure Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	614	BV	ReadCOV_NoWrite	0	10564	Discrete	
AI_S2_EVD_1.Active	EVD-S2 Suction Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	615	BV	ReadCOV_NoWrite	0	10565	Discrete	
AI_S4_EVD_1.Active	EVD-S4 Discharge Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	617	BV	ReadCOV_NoWrite	0	10567	Discrete	
AI_SuctHiP_COMP_1.Active	Compressor Envelope - SuctHiP_COMP (0=Normal 1=Alarm)	Alarm	Normal	618	BV	ReadCOV_NoWrite	0	10568	Discrete	
AI_SuctLowP_COMP_1.Active	Compressor Envelope - SuctLowP_COMP (0=Normal 1=Alarm)	Alarm	Normal	619	BV	ReadCOV_NoWrite	0	10569	Discrete	
Comp_Staging_Order_Skipped.Active	Compressor Staging Order is Skipped Warning (0=Normal 1=Alarm)	Alarm	Normal	632	BV	ReadCOV_NoWrite	0	10580	Discrete	
EVD_PrePosition_Alarm_1.Active	Unexpected EEV Position (0=Normal 1=Alarm)	Alarm	Normal	634	BV	ReadCOV_NoWrite	0	10582	Discrete	
ER_Wheel_High_DP.Active	Energy Recovery Wheel high differential pressure (0=Normal 1=Alarm)	Alarm	Normal	731	BV	ReadCOV_NoWrite	0	10679	Discrete	
Binary Values - Commandable										
Aux_BMS_Digital_Output_1	BMS Commanded auxiliary digital output	Active	Inactive	207	BV	ReadCOV_Commandable	0	24	Coil	
Aux_BMS_Digital_Output_2	BMS Commanded auxiliary digital output	Active	Inactive	208	BV	ReadCOV_Commandable	0	25	Coil	
Aux_BMS_Digital_Output_3	BMS Commanded auxiliary digital output	Active	Inactive	209	BV	ReadCOV_Commandable	0	26	Coil	
Aux_BMS_Digital_Output_4	BMS Commanded auxiliary digital output	Active	Inactive	210	BV	ReadCOV_Commandable	0	27	Coil	
Aux_BMS_Digital_Output_5	BMS Commanded auxiliary digital output	Active	Inactive	211	BV	ReadCOV_Commandable	0	28	Coil	
Aux_BMS_Digital_Output_6	BMS Commanded auxiliary digital output	Active	Inactive	212	BV	ReadCOV_Commandable	0	29	Coil	
Integer Values - Read Only										
Allow_Fan_Delay_Remaining	Startup Sequence Fan Damper Delay. Time before enabling Fan startup sequence.			1	IV	ReadCOV_NoWrite	1	30181	Input	2
Supply_Fan_Delay_Remaining	Supply Fan startup sequence. Time before starting supply fan.			2	IV	ReadCOV_NoWrite	1	30183	Input	3
Exhaust_Fan_Delay_Remaining	Exhaust Fan startup sequence. Time before starting exhaust fan.			3	IV	ReadCOV_NoWrite	1	30185	Input	4
LatestAlm	Most recent alarm. See alarm table.			7	IV	ReadCOV_NoWrite	1	30193	Input	5

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Large Board Points										
Binary Values - Read Only										
High_Low_Press_Circ_A_Alarm.Active	High Low Pressure Switch Alarm Circuit A	Alarm	Normal	733	BV	ReadCOV_NoWrite	0	10682	Discrete	
High_Low_Press_Circ_B_Alarm.Active	High Low Pressure Switch Alarm Circuit B	Alarm	Normal	734	BV	ReadCOV_NoWrite	0	10683	Discrete	
High_Low_Press_Circ_C_Alarm.Active	High Low Pressure Switch Alarm Circuit C	Alarm	Normal	735	BV	ReadCOV_NoWrite	0	10684	Discrete	
High_Low_Press_Circ_D_Alarm.Active	High Low Pressure Switch Alarm Circuit D	Alarm	Normal	736	BV	ReadCOV_NoWrite	0	10685	Discrete	
Greentrol_1_Alarm.Active	Greentrol Device Alarm	Alarm	Normal	737	BV	ReadCOV_NoWrite	0	10686	Discrete	
Greentrol_2_Alarm.Active	Greentrol Device Alarm	Alarm	Normal	738	BV	ReadCOV_NoWrite	0	10687	Discrete	
Greentrol_3_Alarm.Active	Greentrol Device Alarm	Alarm	Normal	739	BV	ReadCOV_NoWrite	0	10688	Discrete	
Medium Board Points										
Analog Inputs - Read Only										
Mixed_Temp_Analog_Input	Mixed Temperature			35	AI	ReadCOV_NoWrite	0.1	30263	Input	2
Exhaust_Fan_Speed_Analog_Input	Exhaust Fan Speed Remote Command Analog Input value			143	AI	ReadCOV_NoWrite	1	30455	Input	2
Supply_Fan_Speed_Analog_Input	Supply Fan Speed Remote Command Analog Input value			155	AI	ReadCOV_NoWrite	1	30461	Input	2
Binary Inputs - Read Only										
Comp_Circ_A_High_Pressure_Digital_Input	Circuit A High Pressure Switch	Active	Inactive	3	BI	ReadCOV_NoWrite	0	10052	Discrete	
Comp_Circ_A_Low_Pressure_Digital_Input	Circuit A Low Pressure Switch	Active	Inactive	4	BI	ReadCOV_NoWrite	0	10053	Discrete	
Comp_Circ_B_High_Pressure_Digital_Input	Circuit B High Pressure Switch	Active	Inactive	5	BI	ReadCOV_NoWrite	0	10054	Discrete	
Comp_Circ_B_Low_Pressure_Digital_Input	Circuit B Low Pressure Switch	Active	Inactive	6	BI	ReadCOV_NoWrite	0	10055	Discrete	
Drain_Pan_Alarm_Digital_Input	Drain Pan Alarm Digital Input Status	Active	Inactive	21	BI	ReadCOV_NoWrite	0	10070	Discrete	
EAD_End_Switch_Digital_Input	Exhaust Air Damper End Switch Digital Input Status	Active	Inactive	22	BI	ReadCOV_NoWrite	0	10071	Discrete	
OAD_End_Switch_Digital_Input	OAD End Switch Digital Input Status	Active	Inactive	52	BI	ReadCOV_NoWrite	0	10101	Discrete	

Appendix: Points List

VARIABLE	DESCRIPTION	ACTIVE TEXT	INACTIVE TEXT	BACNET				MODBUS		
				OBJECT INSTANCE	OBJECT TYPE	ACCESS	HYST	INDEX	REGISTER TYPE	SIZE
Binary Values - Read Only										
Condenser_Fan_4_Digital_Output	Condenser Fan 4 Digital Output	Active	Inactive	122	BV	ReadCOV_NoWrite	0	10175	Discrete	
Condenser_Fan_5_Digital_Output	Condenser Fan 5 Digital Output	Active	Inactive	123	BV	ReadCOV_NoWrite	0	10176	Discrete	
Condenser_Fan_6_Digital_Output	Condenser Fan 6 Digital Output	Active	Inactive	124	BV	ReadCOV_NoWrite	0	10177	Discrete	
Condenser_Fan_7_Digital_Output	Condenser Fan 7 Digital Output	Active	Inactive	125	BV	ReadCOV_NoWrite	0	10178	Discrete	
Condenser_Fan_8_Digital_Output	Condenser Fan 8 Digital Output	Active	Inactive	126	BV	ReadCOV_NoWrite	0	10179	Discrete	
Comp_Circ_A_High_Pressure_Alarm.Active	Comp Circ A High Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	395	BV	ReadCOV_NoWrite	0	10346	Discrete	
Comp_Circ_A_Low_Pressure_Alarm.Active	Comp Circ A Low Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	396	BV	ReadCOV_NoWrite	0	10347	Discrete	
Comp_Circ_B_High_Pressure_Alarm.Active	Comp Circ B High Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	397	BV	ReadCOV_NoWrite	0	10348	Discrete	
Comp_Circ_B_Low_Pressure_Alarm.Active	Comp Circ B Low Pressure Alarm (0=Normal 1=Alarm)	Alarm	Normal	398	BV	ReadCOV_NoWrite	0	10349	Discrete	
Damper_End_Switch_Alarm.Active	Damper End Switch Alarm (0=Normal 1=Alarm)	Alarm	Normal	420	BV	ReadCOV_NoWrite	0	10371	Discrete	
Drain_Pan_Alarm.Active	Drain Pan Alarm (0=Normal 1=Alarm)	Alarm	Normal	422	BV	ReadCOV_NoWrite	0	10372	Discrete	
Exhaust_Fan_1_AMD_analog_input_Alarm.Active	Exhaust Fan 1 CFM Analog Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	424	BV	ReadCOV_NoWrite	0	10374	Discrete	
Freeze_Stat_Alarm.Active	Freeze Stat Alarm (0=Normal 1=Alarm)	Alarm	Normal	441	BV	ReadCOV_NoWrite	0	10391	Discrete	
Mixed_Temperature_Sensor_Alarm.Active	Mixed Temperature Sensor Alarm (0=Normal 1=Alarm)	Alarm	Normal	502	BV	ReadCOV_NoWrite	0	10452	Discrete	
OAD_AMD_analog_input_Alarm.Active	OAD CFM Analog Input Alarm (0=Normal 1=Alarm)	Alarm	Normal	506	BV	ReadCOV_NoWrite	0	10456	Discrete	



Maintenance Log

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Maintenance Log

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Date _____ Time _____ AM/PM

Notes: _____

Our Commitment

As a result of our commitment to continuous improvement, Greenheck reserves the right to change specifications without notice.

Specific Greenheck product warranties are located on greenheck.com within the product area tabs and in the Library under Warranties.

AMCA Publication 410-96, Safety Practices for Users and Installers of Industrial and Commercial Fans, provides additional safety information. This publication can be obtained from AMCA International, Inc. at www.amca.org.

