


**SETUP**

1. For direct static control downstream of terminal, set controller N.O. and damper N.O.
2. For "dumping" or bypass static control, set controller opposite of damper. (E.G. N.O. controller, N.C. damper.)
3. To adjust static pressure use "Lo STAT▲P" Knob.

Note 1

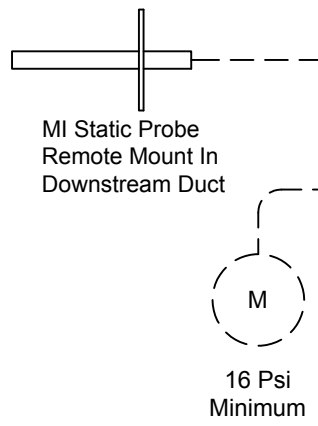

———— Factory Piping  
- - - - Field Piping By Others

**BPCD 340M**

(CDS) ATU\CONTROL DIAGRAMS\PNEUMATIC\

**Control Wiring Diagram**

STATIC PRESSURE CONTROL PNEUMATIC  
PRESSURE INDEPENDENT

Unless Otherwise Specified:  
1. Dimensions Are In Inches.  
2. Tolerances Are:  
Fractions Decimals Angles  
±1/32 ±.X = .1 ±1°  
±.XX = .02  
±.XXX = .010

N/A	C	Removed logo	7/12/21	CG
N/A	B	UPDATED TO NEW FORMAT	09/08/17	RML
N/A	A	Actuator Update	9/07/06	CLS
ECN. No.	Rev	Description	Date	Rev'd By:

DWN. BY	CLS	DATE	9/07/06	DWG. NO.	REV.
CHK'D BY	RE	SCALE	NTS	BPCD340M	C