


**SETUP**

1. For direct static control downstream of terminal, set controller N.O. and damper N.O.
2. For "dumping" or bypass static control, set controller opposite of damper. (E.G. N.O. controller, N.C. damper.)
3. To adjust static pressure use "Lo STAT▲P" Knob.

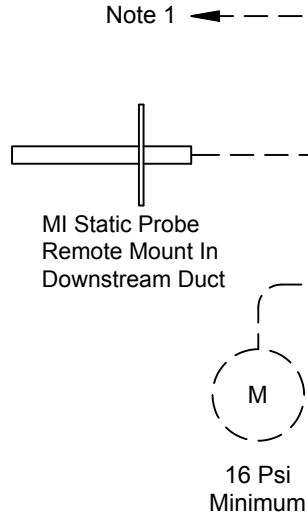

———— Factory Piping  
----- Field Piping By Others

**SRCD 440M**

(CDS) ATU\CONTROL DIAGRAMS\PNEUMATIC\

Unless Otherwise Specified:  
1. Dimensions Are In Inches.  
2. Tolerances Are:  
Fractions Decimals Angles  
±.X = .1  
±1/32 ±.XX = .02 ±1°  
±.XXX = .010

**Control Wiring Diagram**

Static Pressure Control Pneumatic  
Pressure Independent

Phone: 715.359.6171  
Fax: 715.355.2399  
Parts : 800.355.5354  
gfcinfo@greenheck.com  
www.greenheck.com

N/A	C	Removed logo	7/12/21	CG
N/A	B	Update to new format	6/14/17	RE
N/A	A	Actuator Update	9/07/06	CLS
ECN. No.	Rev	Description	Date	Rev'd By:

DWN. BY	CLS	DATE	9/07/06	DWG. NO.	REV.
CHK'D BY	RE	SCALE	NTS	SRCD440M	C