



SETUP

1. For direct static control downstream of terminal, set controller N.O. and damper N.O.
2. For "dumping" or bypass static control, set controller opposite of damper. (E.G. N.O. controller, N.C. damper.)
3. To adjust static pressure use "Lo STAT▲P" Knob.

Note 1

THCD 140M

(CDS) ATU\CONTROL DIAGRAMS\PNEUMATIC\

Control Wiring Diagram

Unless Otherwise Specified:
1. Dimensions Are In Inches.
2. Tolerances Are:
Fractions Decimals Angles
±.X = .1
±1/32 ±.XX = .02 ±1°
±.XXX = .010

Static Pressure Control Pneumatic
Pressure Independent

Phone: 715.359.6171
Fax: 715.355.2399
Parts : 800.355.5354
gfcinfo@greenheck.com
www.greenheck.com

| | | | | |
|----------|-----|----------------------|---------|-----------|
| N/A | C | Removed logo | 7/7/21 | CG |
| N/A | B | Update to new format | 6/13/17 | RE |
| N/A | A | Actuator Update | 9/07/06 | CLS |
| ECN. No. | Rev | Description | Date | Rev'd By: |

| | | | | | |
|----------|-----|-------|---------|-----------|------|
| DWN. BY | CLS | DATE | 9/07/06 | DWG. NO. | REV. |
| CHK'D BY | RE | SCALE | NTS | THCD 140M | C |