

## Assembly Instructions

**READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.**

### Document Instructions


Use Document #1016010 with fastener kit 879432. This kit is to be used with the Vektor-M series. The fasteners contained within the kit are to be used to attach the fan assembly to the roof curb. Use the images located within this document to locate the position of the fasteners on the unit.

### Assembly Instructions

1. See Greenheck Document #464652 (Installation, Operation and Maintenance Manual: Vektor-MD, Vektor-MH and Vektor-MS) for full bypass air plenum (BAP) installation instructions.
2. See image below to locate bolt holes. Install moly-coated 316 stainless steel screws (provided) in all holes in plenum cap.
3. The number of fasteners per side may change with fan size and configuration (2x1 system, 3x1 system, etc.)

### Tools Required

- Cordless drill (electric or pneumatic)
- 1/2 inch nut setter

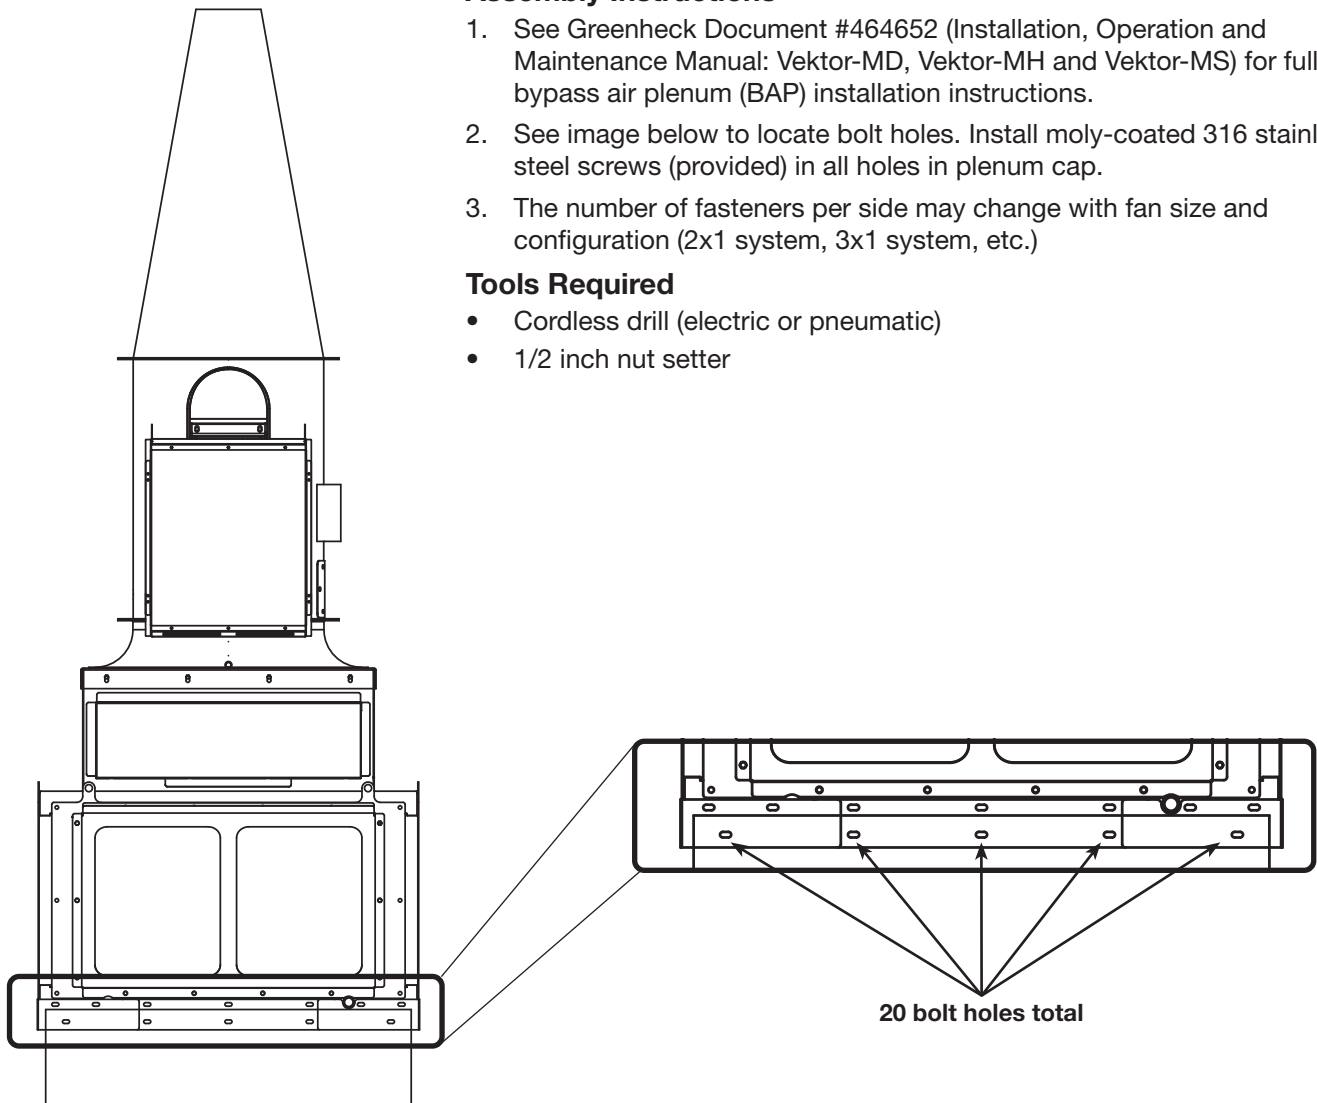

### FASTENER KIT 879432 – VEKTOR-M CURB

Part Description	Part #	Quantity
CS,HH,.313-18X2,SS,316,MOLY	416980	20
Assembly Instructions	1016010	1