

Assembly Instructions

READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.

Document Instructions

Use Document #1016013 with fastener kit 879437. These kits are to be used with the Vektor-H series. The fasteners contained within the kit are to be used to attach the fan body to the bypass air plenum (BAP). Use the images located within this document to locate the position of the fasteners on the unit.


Assembly Instructions

1. See Greenheck Document #469003 (Installation, Operation and Maintenance Manual: Vektor-H and Vektor-HS) for full installation instructions.
2. Part #416511, included in fastener kit 879437, are thread cutting screws. Use these screws as per instructed in Document #469003 to add threads to the bolt holes.
3. Depending on the size of the Vektor-H unit, the stainless steel screws used from fastener kit 879437 to fasten the fan to the BAP will range from 12 to 16.
4. See image below to locate bolt holes. Install moly-coated 316 stainless steel screws (provided) in all holes around the perimeter of the fan base.
5. 1/4 inch thread cutting screws are recommended for fastening the Bypass Air Plenum (BAP) to the roof curb.

NOTE: This part is not supplied by Greenheck.

Tools Required

- Cordless drill (electric or pneumatic)
- 1/2 inch nut setter

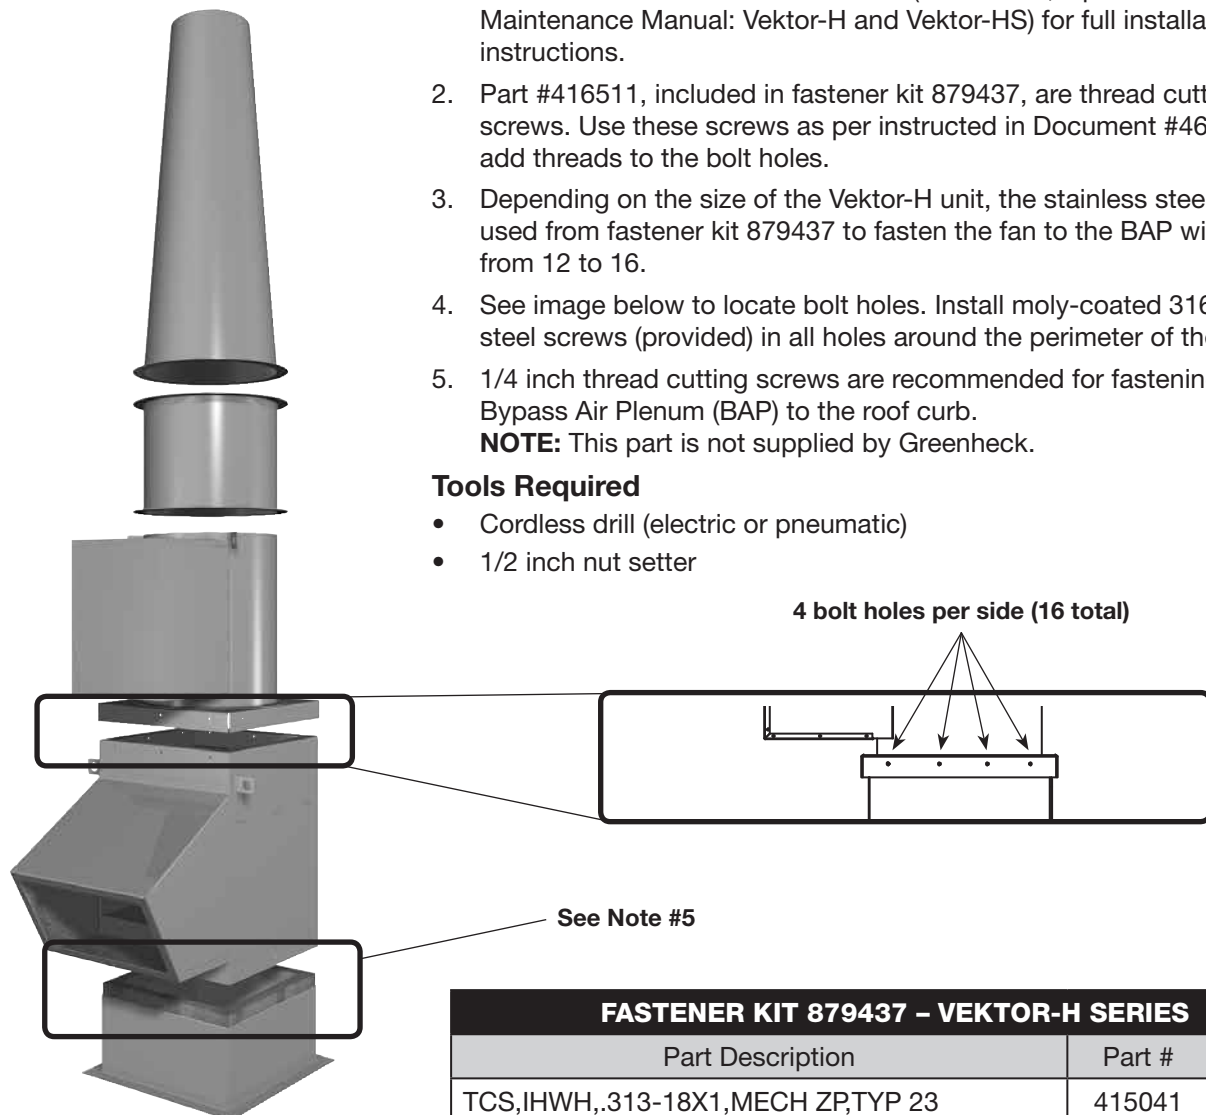

FASTENER KIT 879437 – VEKTOR-H SERIES

Part Description	Part #	Quantity
TCS,IHWH,,313-18X1,MECH ZP,TYP 23	415041	2
CS,HH,,313-18X1,SS,316,MOLY,W/EPDM WSHR	416511	16
Assembly Instructions	1016013	1