

## Assembly Instructions



**READ THROUGH THESE INSTRUCTIONS PRIOR TO STARTING ASSEMBLY.**

### Document Instructions

Use Document #1016917 with fastener kit 915014. This kit is to be used with the Vektor-M Energy Recovery System (ERS) curbs. The insulation clips provided are to secure insulation pieces to the roof curb panels when assembly of curb is complete. Use images located within this document to locate the position of the fasteners on the unit.

### Assembly Instructions

1. See Greenheck Document #474117 (Fan Plenum Curb Assembly) for full installation instructions.
2. The fastener kit includes insulation clips to secure insulation to curb panels. In some cases, pieces of insulation may need to be removed prior to bolting in brackets. When all brackets are installed and the insulation is replaced, the clips can be pushed onto insulation pins. Do not install clips until curb is fully assembled.
3. See image below to locate which insulation pieces require insulation clips to be field installed. Image shown is representation, actual curb panel may vary.

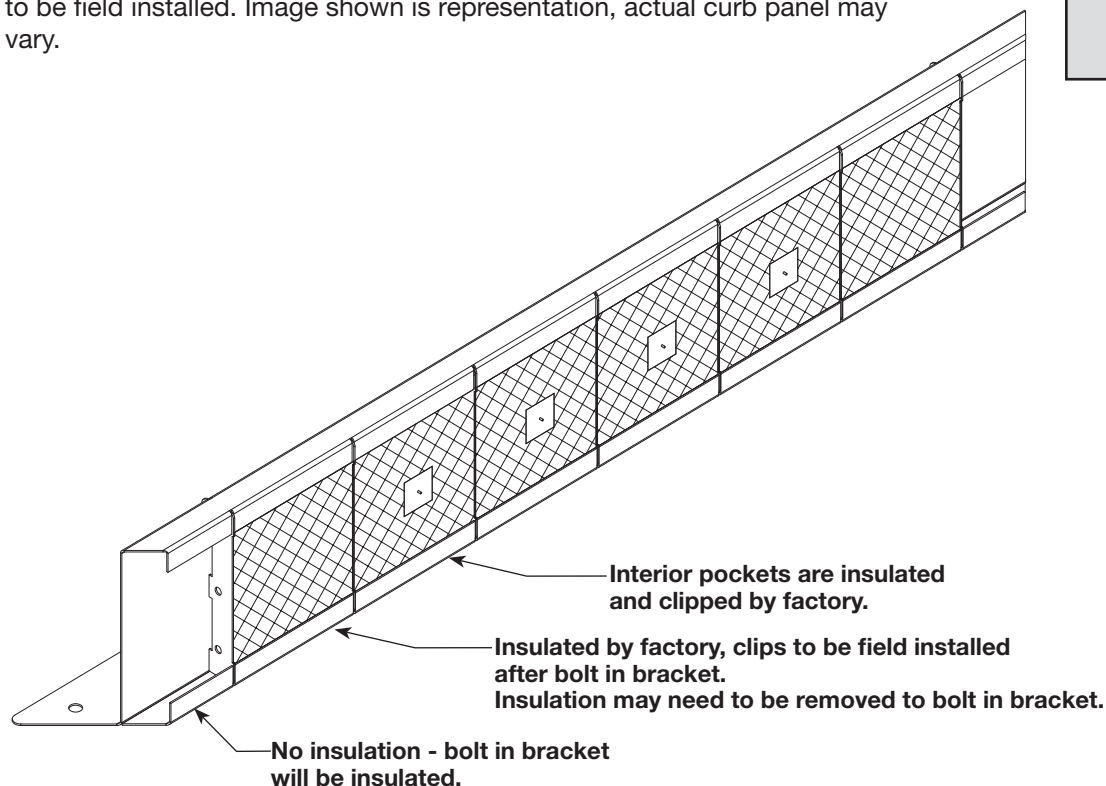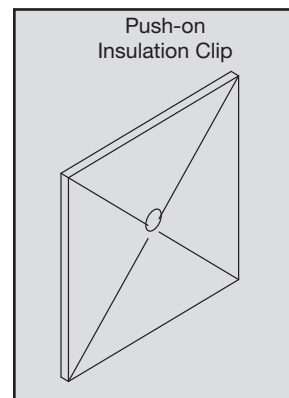

### FASTENER KIT 915014 – ERS CURB, INSULATION CLIPS

Part Description	Part #	Quantity
CLW,INSUL,1.5X1.5,GALV.	415660	36
Assembly Instructions	1016917	1