


C800CH

Architectural Canopy | Extruded Aluminum

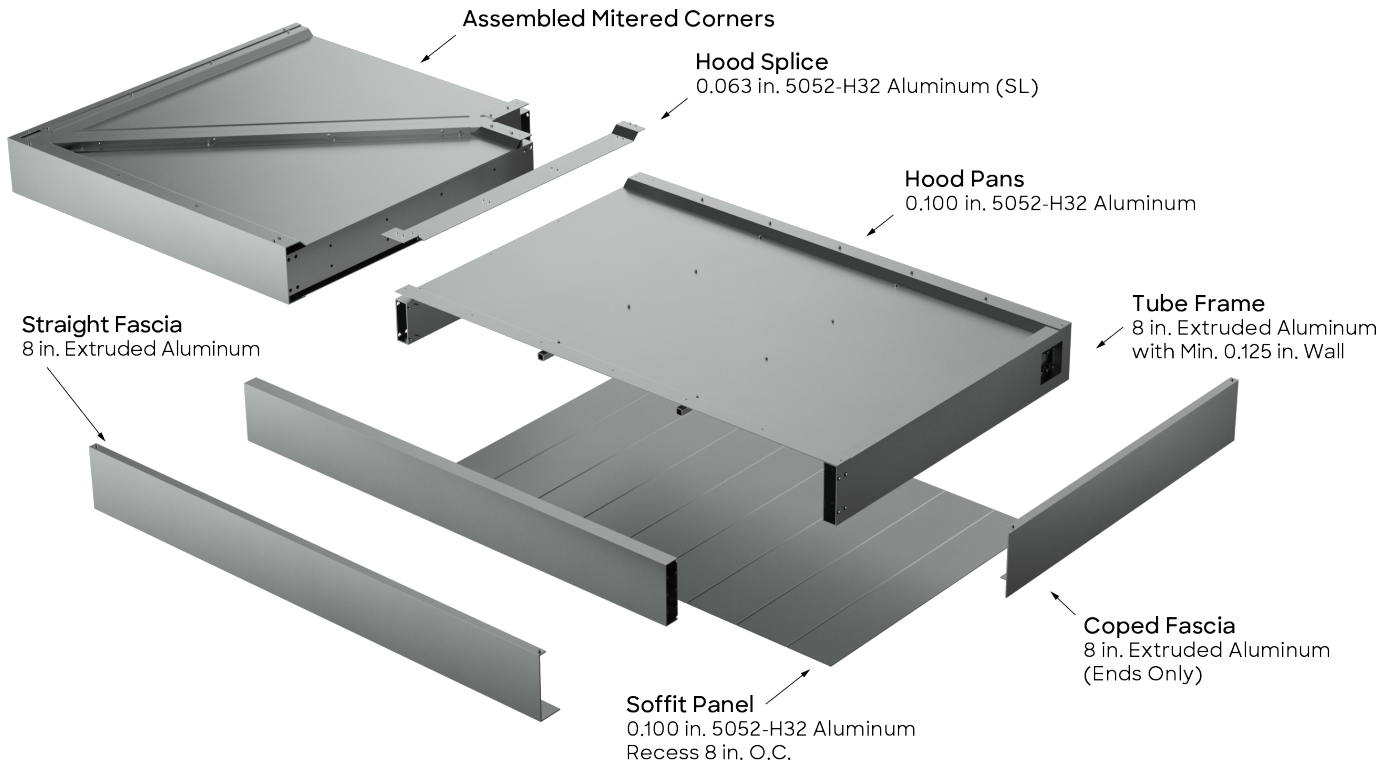

Single Canopy Install Overview

- Layout canopy system as per submission drawings.
- Mount canopy section to the support wall, see submission details for proper mounting locations.
- Level the canopy section prior to final installation of support plate, secure the canopy to the wall
- Install flashing (by others) as required.
- Attach rear soffit mounting plate, one coped fascia ends, and the front fascia.
- Slide in finished soffit panel and secure as required
- Attach the remaining coped fascia end and secure as required
- Drill/cut hole in hood to allow for downspout installation





C800CH

Architectural Canopy | Extruded Aluminum

Layout and Canopy Mounting

1. Locate canopy position on the wall
2. Mount to the wall, ensure that the units are level.
3. Secure to wall using hardware specified on submission drawings, as well as the required reinforcement plate.

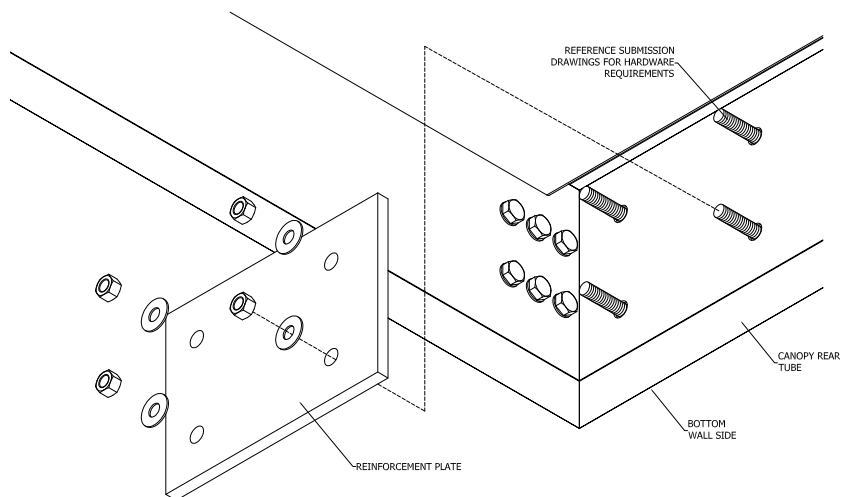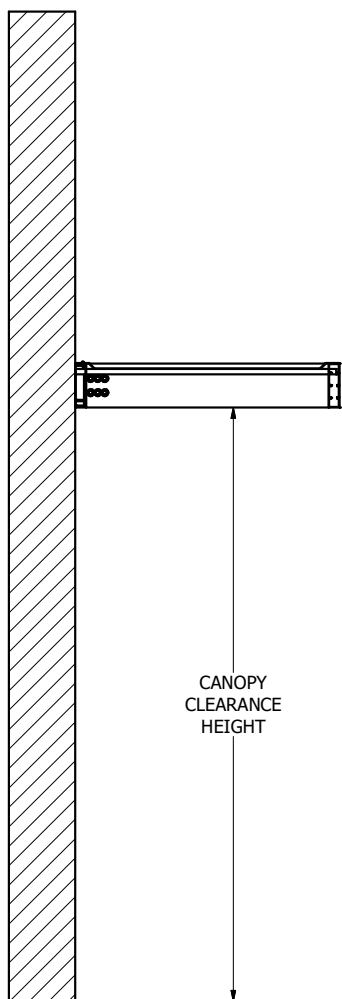


AIROLITE[®]
The look that works.[™]


C800CH

Architectural Canopy | Extruded Aluminum

4. Once entire canopy run is installed, attach fascia to the sides and face of the canopy.

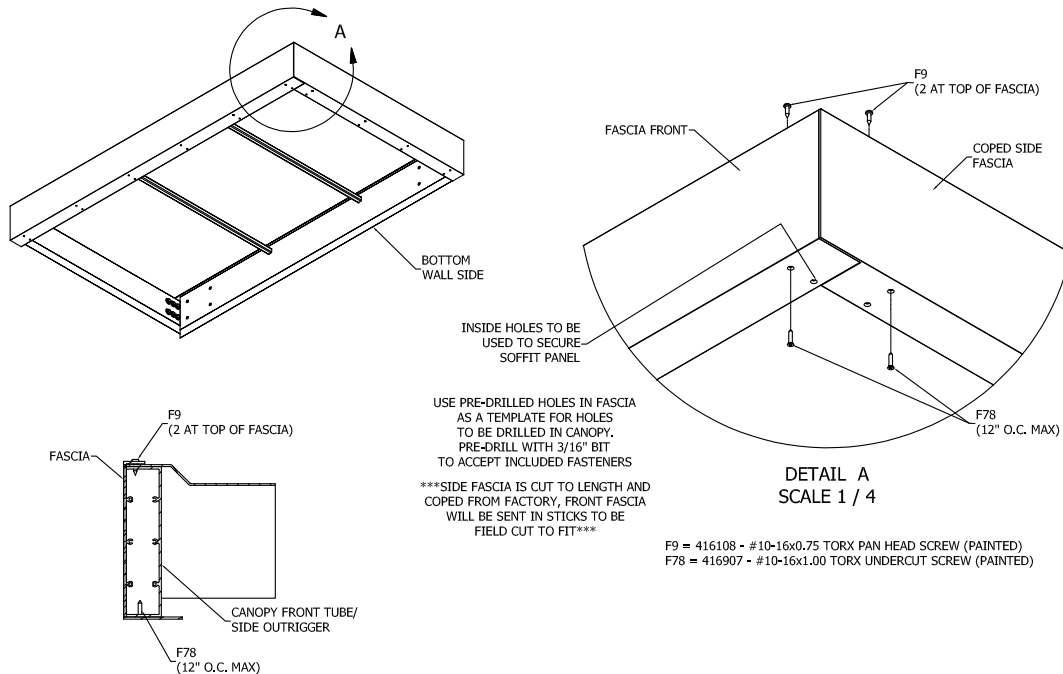

5. Install soffit and rear soffit strip along the entire bottom of the canopy.

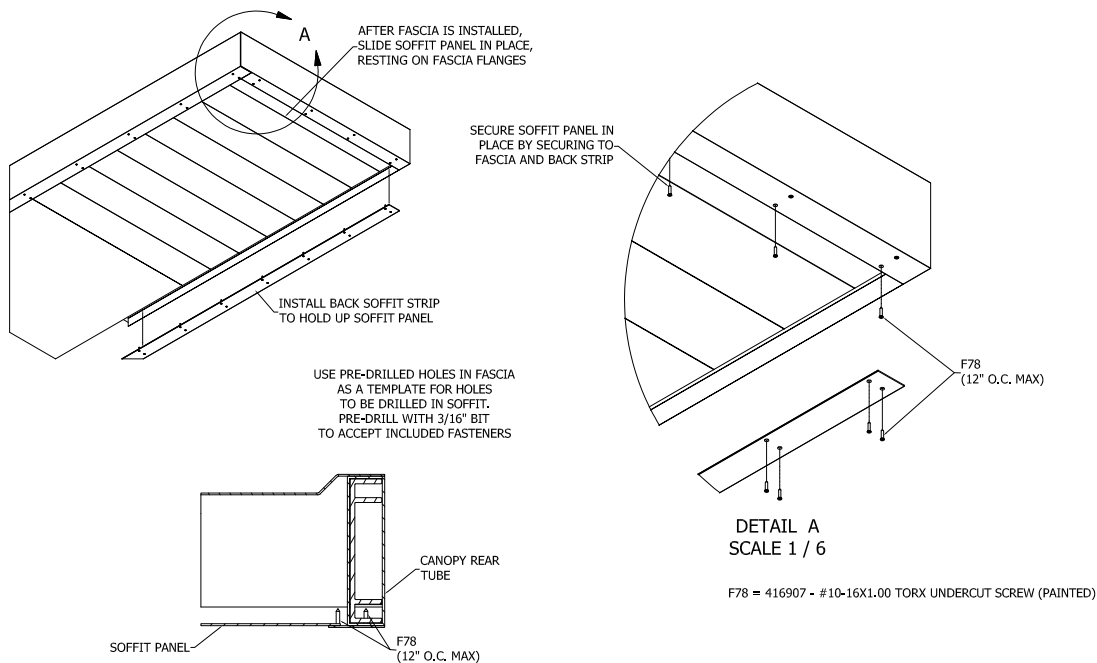

AIROLITE®
The look that works.™

C800CH

Architectural Canopy | Extruded Aluminum


6. At soffit splice locations, use splice plate to cover the seams.

*INSTALL SOFFIT PANEL 1


*ADD SOFFIT MULLION STRIP AT END OF SOFFIT PANEL, WITH SOFFIT PANEL OVERLAPPING THE MULLION STRIP. MULLION STRIP SHOULD BE SUPPORTED ON FRONT FASCIA AND REAR SUPPORT STRIP

*INSTALL SOFFIT PANEL 2, OVERLAPPING THE MULLION STRIP

*ADD FASTENER TO MULLION STRIP AT CENTER TO SECURE SOFFIT PANELS

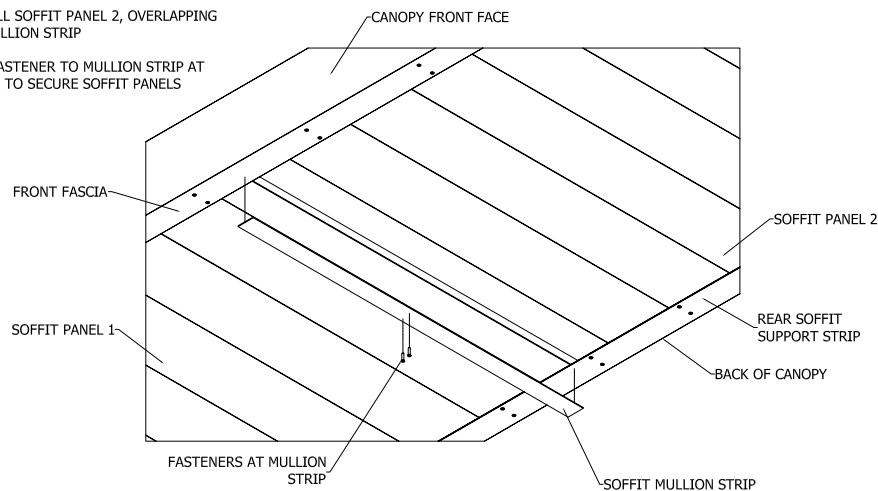

7. When corners are being supplied, use the corner soffit splice plate.

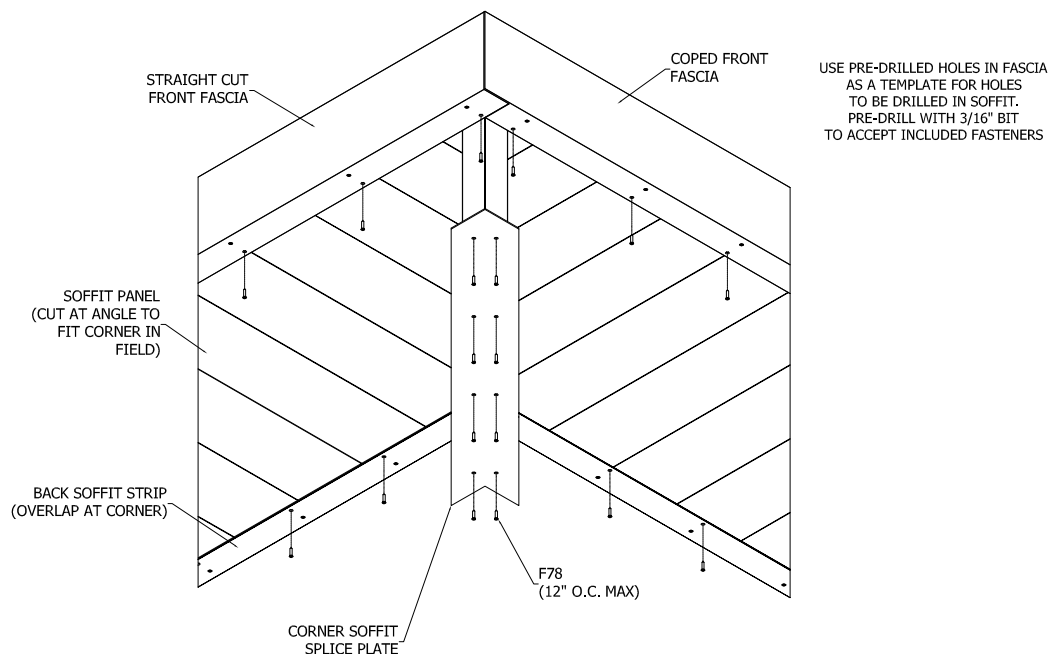


F78 = 416907 - #10-16x1.00 TORX UNDERCUT SCREW (PAINTED)

AIROLITE
The look that works.™


C800CH

Architectural Canopy | Extruded Aluminum

8. Attach hood splice plates and seal joints and corners.

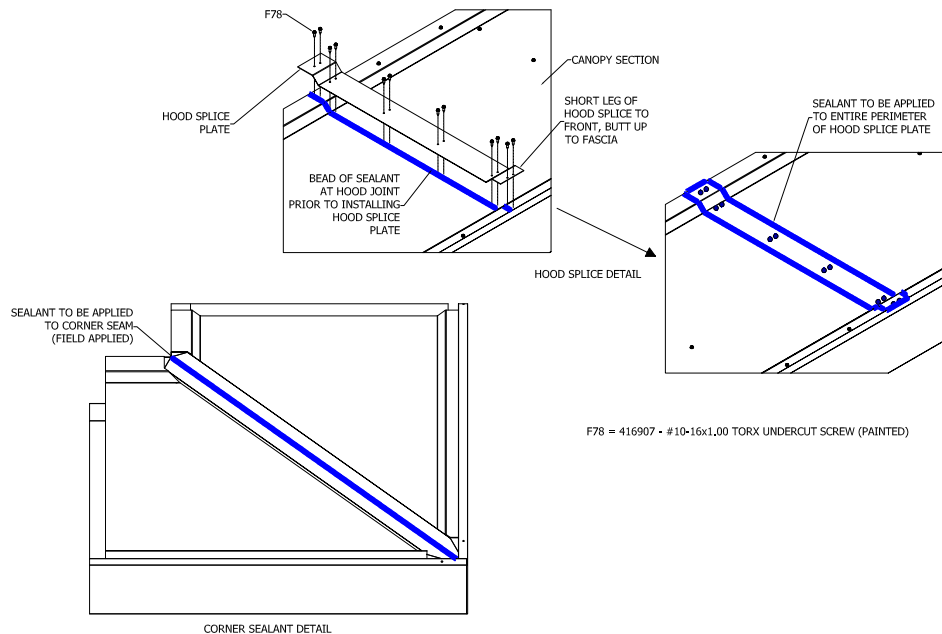

9. Install downspouts in desired location.

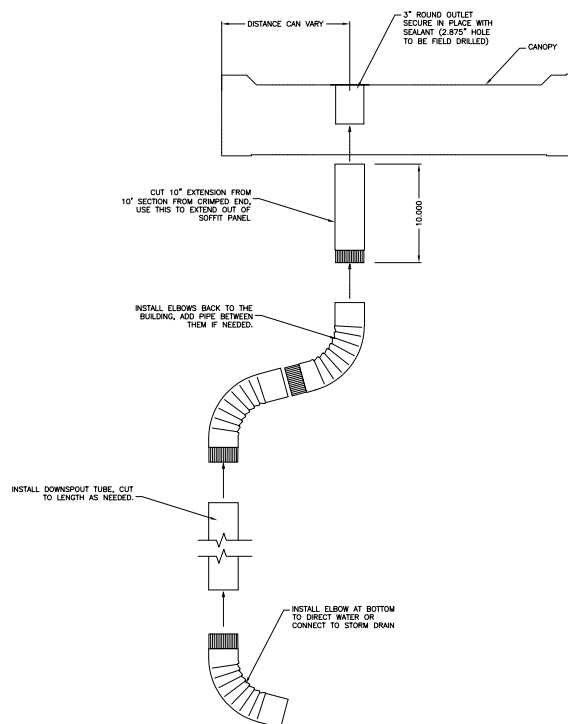

AIROLITE®
The look that works.™